

GENERAL INFORMATION

FRAME

FRAME/BODY PANELS/EXHAUST SYSTEM:

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Seat rail flange socket bolt/flange nut	2	10	59 (6.0, 43)	
Seat rail special bolt/flange nut	2	10	59 (6.0, 43)	
Seat rail assembly flange bolt/nut	2	8	30 (3.1, 22)	
Seat rail brace socket bolt	4	8	26 (2.7, 20)	
Passenger seat bracket special bolt	2	8	26 (2.7, 20)	
Passenger seat bracket socket bolt	2	8	26 (2.7, 20)	
Rider seat bracket mounting bolt/nut	4	6	9.8 (1.0, 7)	
Rider footpeg bracket socket bolt	4	8	37 (3.8, 27)	
Bank sensor	2	6	11 (1.1, 8)	
Passenger footpeg bracket socket bolt	4	8	26 (2.7, 20)	
Exhaust pipe joint nut	8	7	12 (1.2, 9)	
Exhaust pipe mounting bolt	1	8	23 (2.3, 17)	
Exhaust joint pipe clamp SH bolt	1	6	9.8 (1.0, 7)	
Exhaust valve pulley nut	1	6	4.9 (0.5, 3.6)	
Exhaust valve retaining screw	2	4	1.5 (0.15, 1.1)	
Exhaust valve pulley housing flange SH bolt	2	6	9.8 (1.0, 7)	
Exhaust pipe clamp bolt	1	8	18 (1.8, 13)	
Upper cowl stay flange bolt	2	8	32 (3.3, 24)	
Cowl stay mounting bolt	2	6	12 (1.2, 9)	
Windscreen mounting screw	6	5	0.5 (0.05, 0.4)	
Middle cowl pan screw	2	5	1.5 (0.15, 1.1)	
Middle cowl special screw	2	6	9.8 (1.0, 7)	
Under cowl pan screw	6	5	1.5 (0.15, 1.1)	
Under cowl special screw	4	6	9.8 (1.0, 7)	
Inner cowl special screw	1	6	9.8 (1.0, 7)	
Front fender pan screw	6	6	12 (1.2, 9)	
Rearview mirror socket bolt	4	6	6.8 (0.7, 5.1)	

MAINTENANCE:

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Throttle cable adjuster lock nut	2	6	5.4 (0.55, 4.0)	