

## DAMPER OIL FLOW DIAGRAM

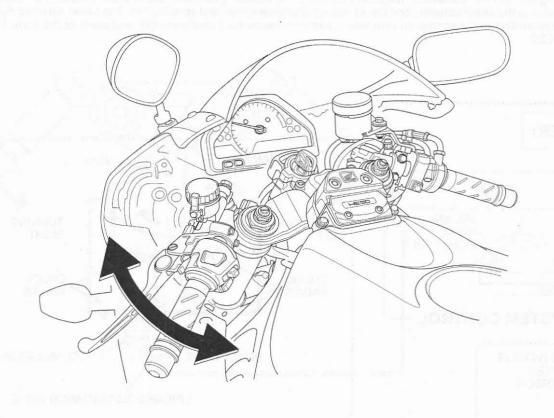

WHEN THE STEERING MOVES TO LEFT:

WHEN THE STEERING MOVES TO RIGHT:

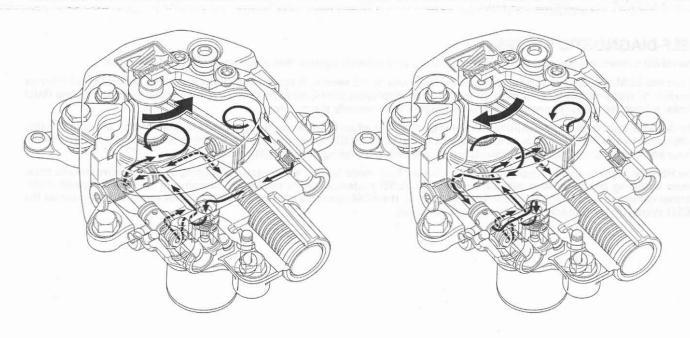

2-3