

REAR SEAT COWL


REMOVAL

Remove the following:

- Rider seat (page 3-4)
- Passenger seat (page 3-4)


Remove the four special screws.
Carefully pull out both sides of the rear seat cowl, then remove it upward.

Disconnect the tail/brake light connector.

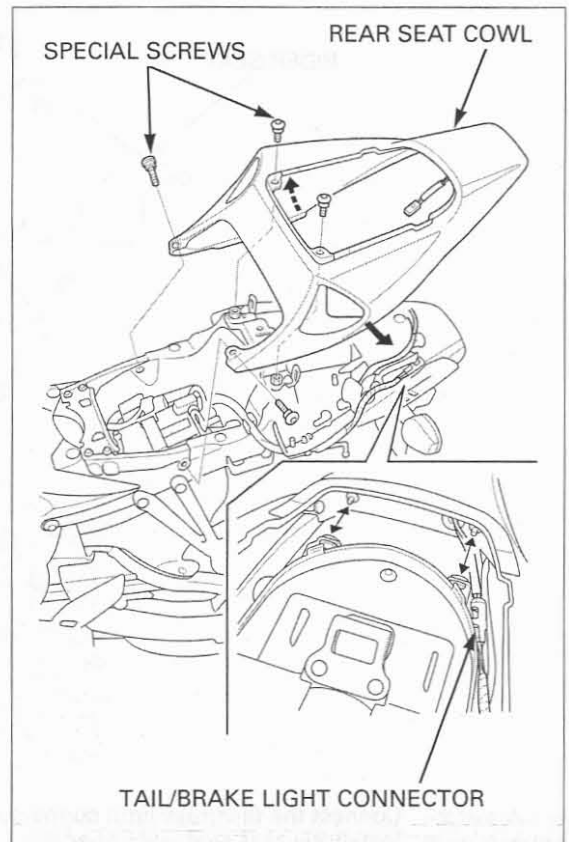

DISASSEMBLY/ASSEMBLY

Remove the screws and tail/brake light unit.

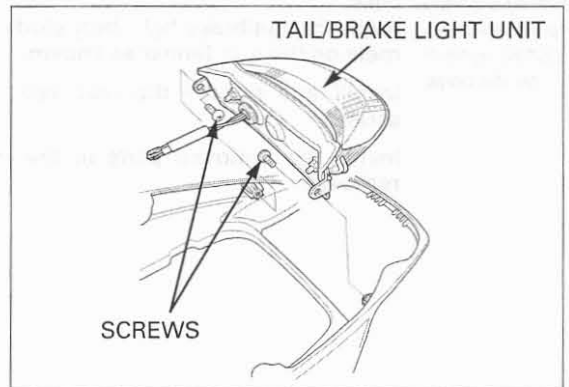

Remove the two screws, trim clip and air duct.

Install the air duct and tail/brake light unit in the reverse order of removal.

