



FRAME/BODY PANELS/EXHAUST SYSTEM

Install the inner middle cowl.

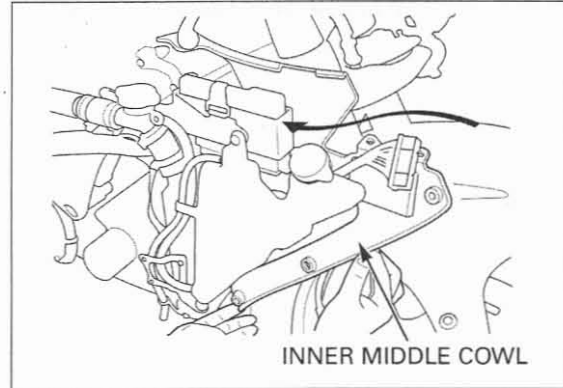

Connect the turn signal connector.

Install the middle cowl onto the upper cowl while aligning the slits in the middle cowl with the hooks on the upper cowl.

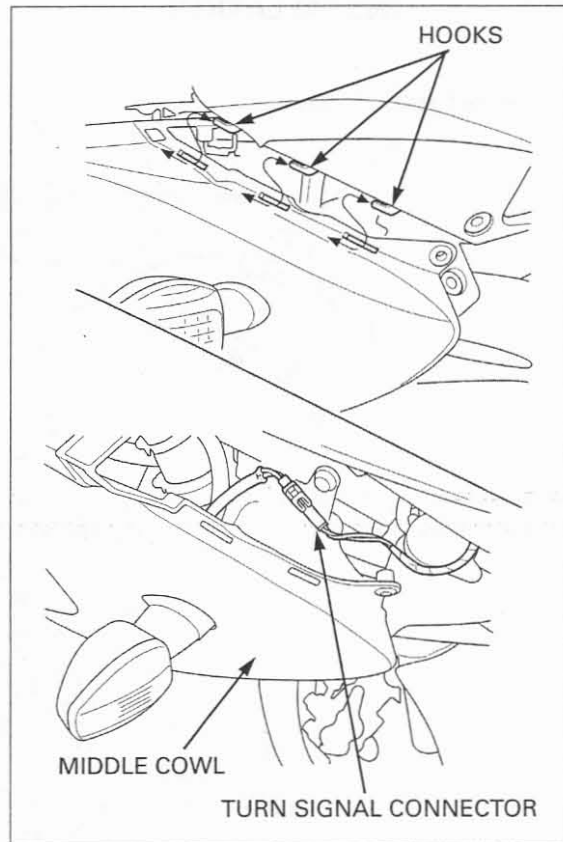

Install and tighten the upper cowl-to-middle cowl pan screws to the specified torque.

TORQUE: 1.5 N·m (0.15 kgf·m, 1.1 lbf·ft)

Install and tighten the middle cowl special screws to the specified torque.

TORQUE: 9.8 N·m (1.0 kgf·m, 7 lbf·ft)

