


Install and tighten the fuel tank front mounting bolts to the specified torque.

TORQUE: 26 N·m (2.7 kgf·m, 20 lbf·ft)

Install the removed parts in the reverse order of removal.

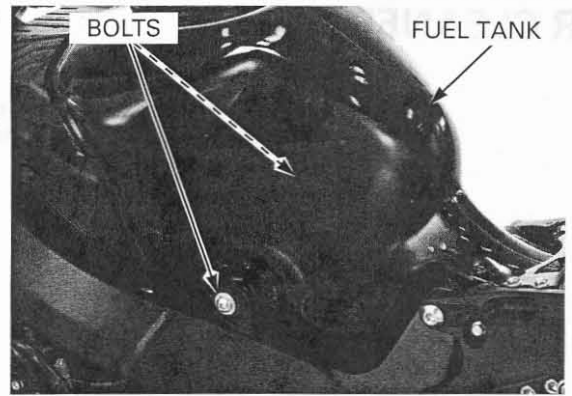


THROTTLE OPERATION

Check for smooth throttle operation at full opening and automatic full closing in all steering positions. Check the throttle cables and replace them if they are deteriorated, kinked or damaged. Lubricate the throttle cables, if throttle operation is not smooth.


Measure the free play at the throttle grip flange.

FREE PLAY: 2 – 4 mm (1/16 – 3/16 in)

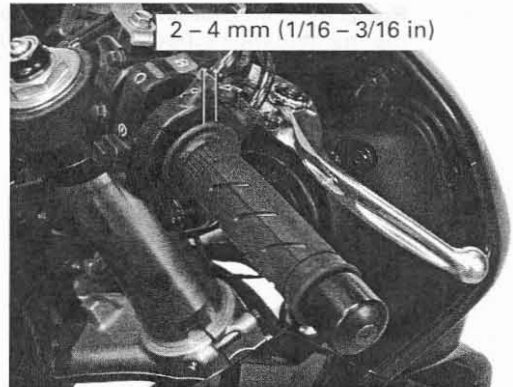

Throttle grip free play can be adjusted at either end of the throttle cable.

Minor adjustment is made with the upper adjuster. Adjust the free play by loosening the lock nut and turning the adjuster.

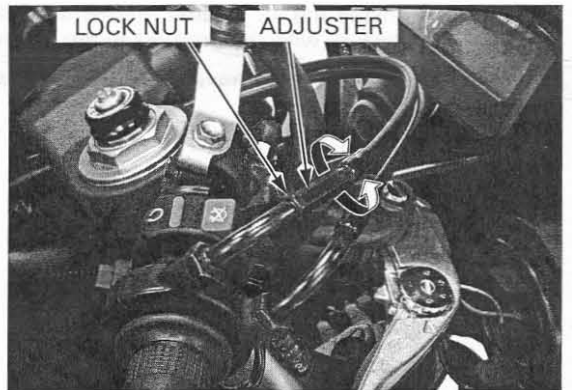

Major adjustment is made with the lower adjuster.

Remove the air cleaner housing (page 6-40).

Adjust the free play by loosening the lock nut and turning the adjuster.

After adjustment, tighten the lock nut securely.

Recheck the throttle operation.

Replace any damaged parts, if necessary.

