



MAINTENANCE


Move the radiator to the right and release the radiator grommet from the bracket boss, then move the radiator downward.

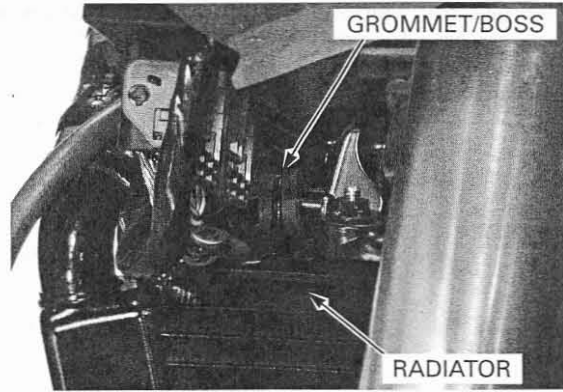

Disconnect the CMP sensor 2P (Black) connector.

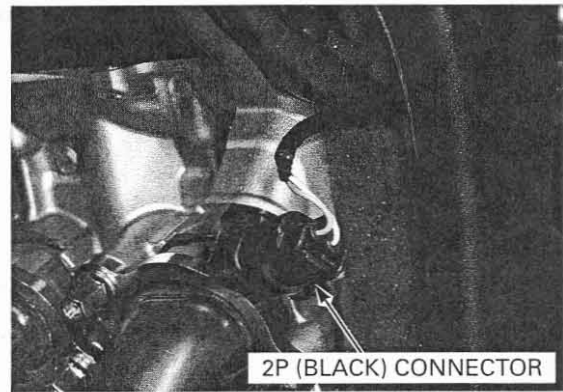

Remove the two trim clips and air intake grill.

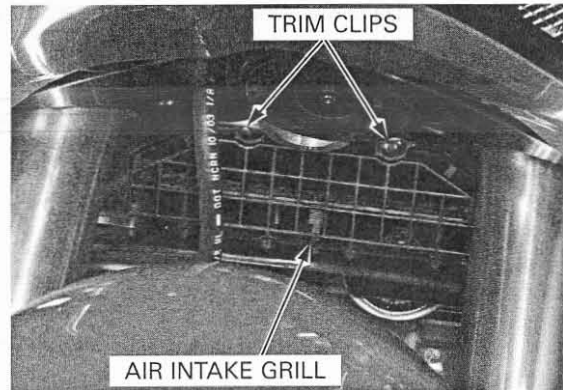

Disconnect the vacuum hose from the variable air intake diaphragm.

