



Remove the air cleaner housing mounting screws.

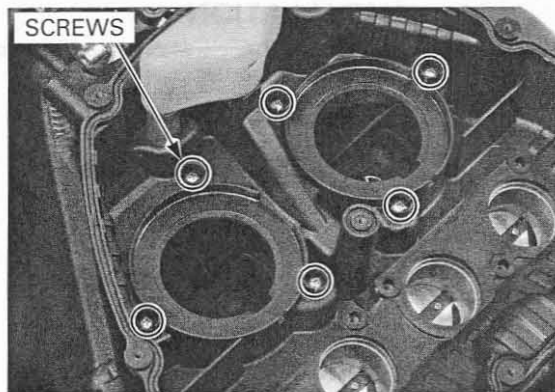

Disconnect the PAIR air suction hose from the air cleaner housing.

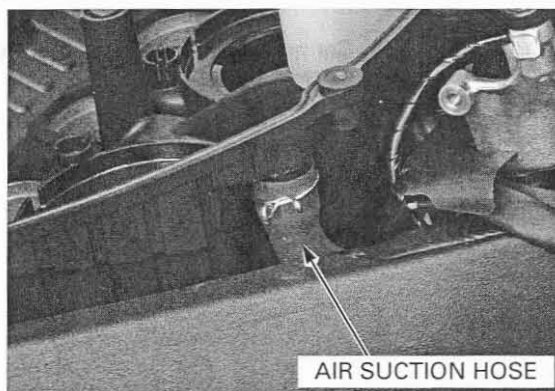

Disconnect the crankcase breather hose from the air cleaner housing.

Remove the air cleaner housing.



Remove the oil separation chamber from the lower air cleaner housing.

