


FUEL SYSTEM (Programmed Fuel Injection)

INSTALLATION

Install the oil separation chamber to the lower air cleaner housing.


OIL SEPARATION CHAMBER

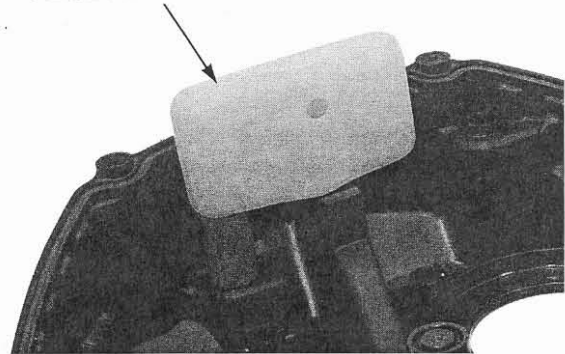

Connect the crankcase breather hose to the air cleaner housing.

AIR CLEANER HOUSING


CRANKCASE BREATHER HOSE

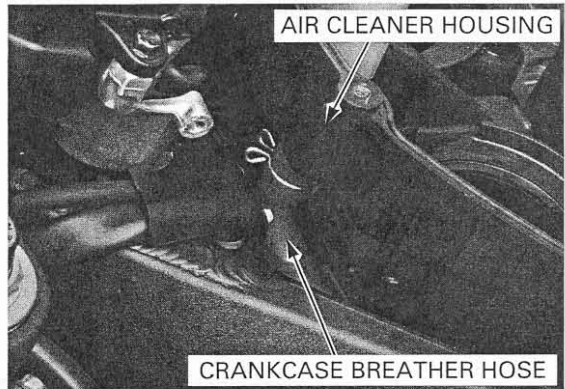

Connect the PAIR air suction hose to the air cleaner housing.

Install the air cleaner housing onto the throttle body and air intake duct.

AIR SUCTION HOSE

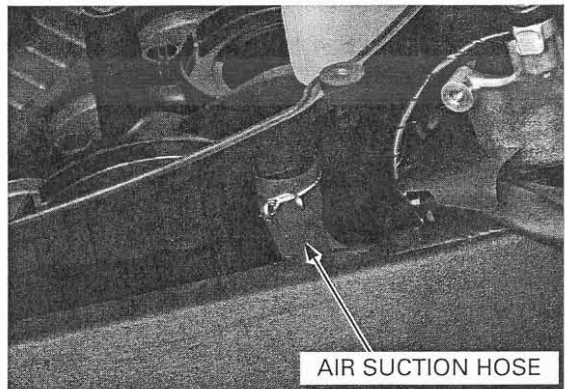

Install the lower air cleaner housing onto the air intake duct, tighten the mounting screws.

TORQUE: 1.2 N·m (0.12 kgf·m, 0.9 lbf·ft)

SCREWS

