


IAT SENSOR

REMOVAL/INSTALLATION


Lift and support the fuel tank (page 4-5).
Disconnect the IAT sensor 2P (Gray) connector.

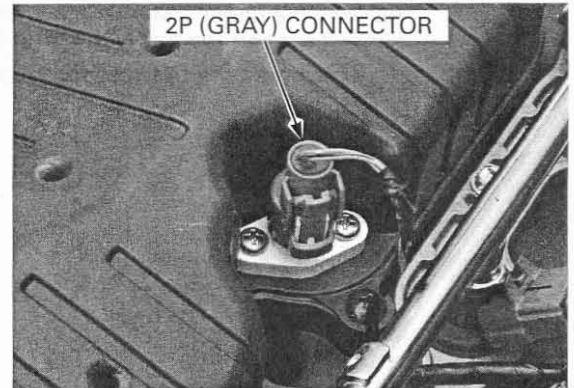

Remove the screws and IAT sensor from the air cleaner housing.

Installation is in the reverse order of removal.

TORQUE: 1.2 N·m (0.12 kgf·m, 0.9 lbf·ft)

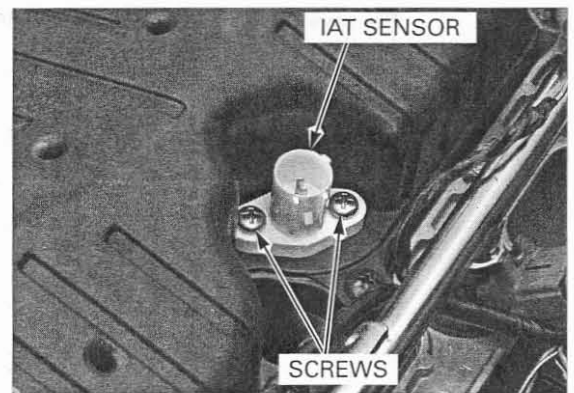


ECT SENSOR

Replace the ECT sensor while the engine is cold.

REMOVAL/INSTALLATION

Drain the coolant from the system (page 7-6).
Lift and support the fuel tank (page 4-5).
Disconnect the 3P (Gray) connector from the ECT sensor.
Remove the ECT sensor and sealing washer.

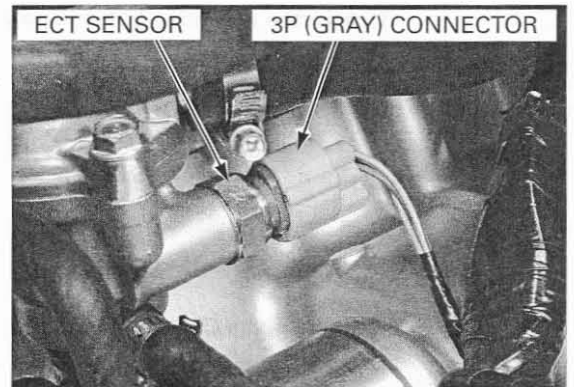

Always replace a sealing washer with a new one.

Install a new sealing washer and ECT sensor.
Tighten the ECT sensor to the specified torque.

TORQUE: 23 N·m (2.3 kgf·m, 17 lbf·ft)

Connect the ECT sensor 3P (Gray) connector.

Fill the cooling system with recommended coolant (page 7-6).

