


FUEL SYSTEM (Programmed Fuel Injection)

Check the resistance between the terminals of the PAIR control solenoid valve.

STANDARD: 20 – 24 Ω (20 °C/68 °F)

If the resistance is out of specification, replace the PAIR control solenoid valve.

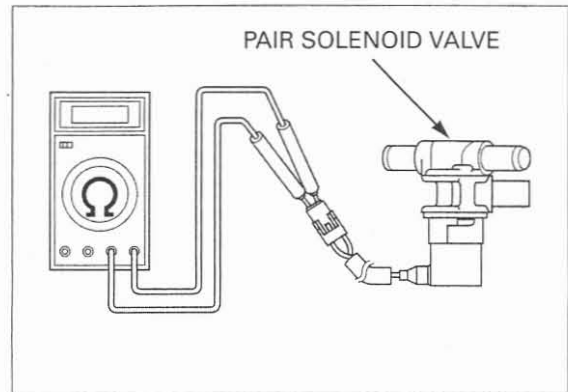


EVAP PURGE CONTROL SOLENOID VALVE (CALIFORNIA TYPE ONLY)

REMOVAL/INSTALLATION

Disconnect the EVAP canister-to-fuel tank hose from the canister.

Disconnect the EVAP canister-to-purge control solenoid valve hose.

Remove the mounting bolts and EVAP canister from the bracket.

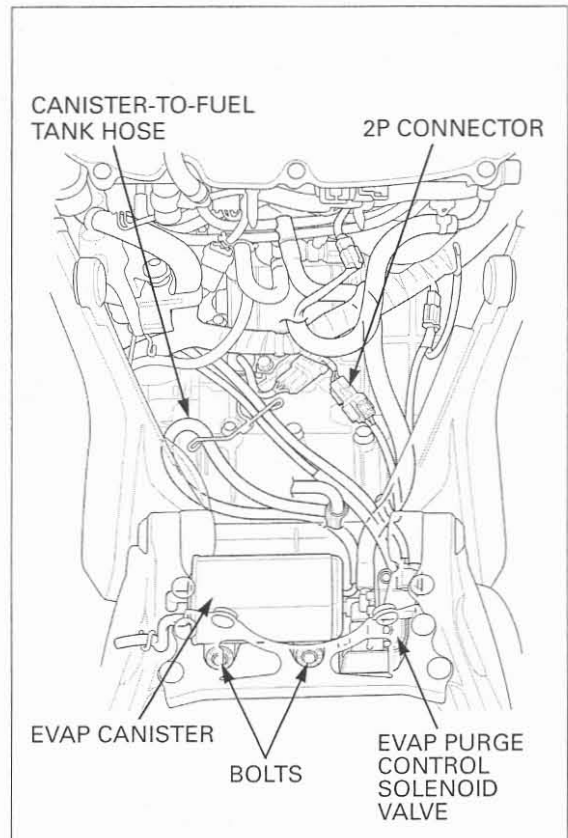

Disconnect the purge control solenoid valve-to-throttle body hose from the solenoid valve.

Remove the bolts and canister bracket/solenoid valve as an assembly from the frame.

Remove the bolts and EVAP purge control solenoid valve from the bracket.

Installation is in the reverse order of removal.

