



COOLING SYSTEM

Remove the separator plate from the water pump cover.
Remove the dowel pins and O-ring from the water pump cover.

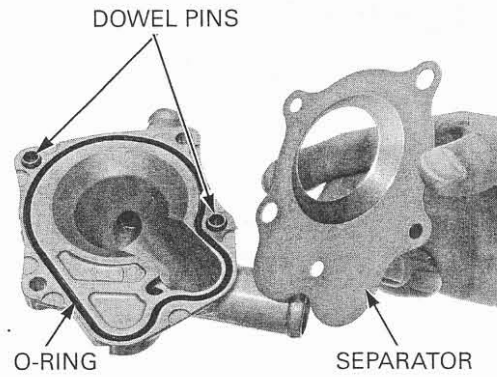

Disconnect the water joint hose from the water pump body.
Remove the water pump body from the crankcase.

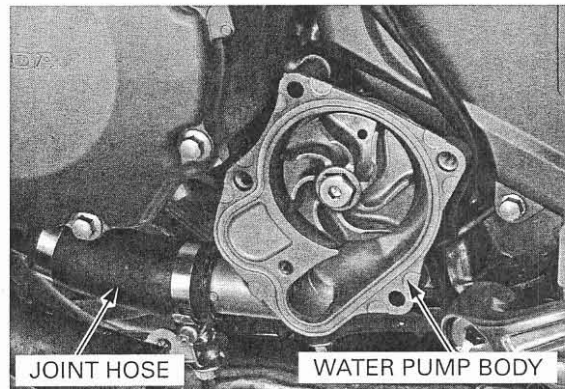

INSTALLATION

