

ENGINE REMOVAL/INSTALLATION

Connect the following connectors:

- Vehicle speed sensor 3P (Natural) connector
- Engine sub-harness 2P (Black) connector

Install the following:

- Throttle body (page 6-47)
- Air cleaner housing (page 6-40)
- Radiator reserve tank (page 7-20)
- Radiator (page 7-10)
- Fuel tank (page 6-36)
- Exhaust pipe (page 3-30)
- Under cowls/middle cowl (page 3-7)

Adjust the drive chain slack (page 4-26).

Pour recommended engine oil up to the proper level (page 4-22).

Fill the cooling system with the recommended coolant and bleed any air (page 7-6).

