



CYLINDER HEAD/VALVES

Turn the crankshaft clockwise one full turn (360°) and tighten the other cam sprocket bolts.

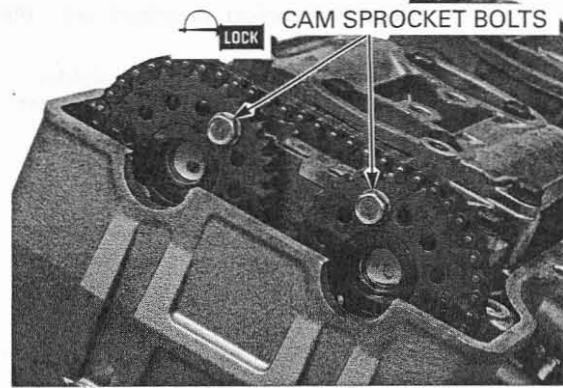


In case the camshaft position sensor rotor was removed, tighten the camshaft position sensor rotor bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

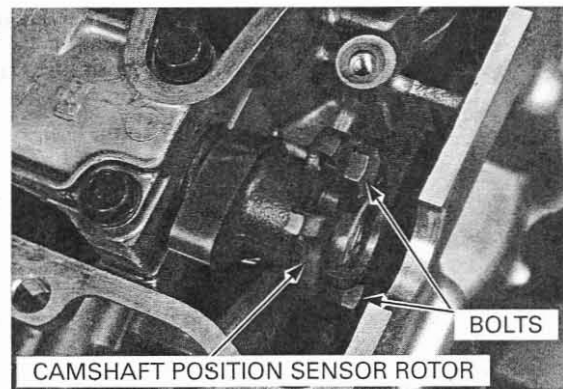

Install the cam chain guide B, and tighten the bolts.

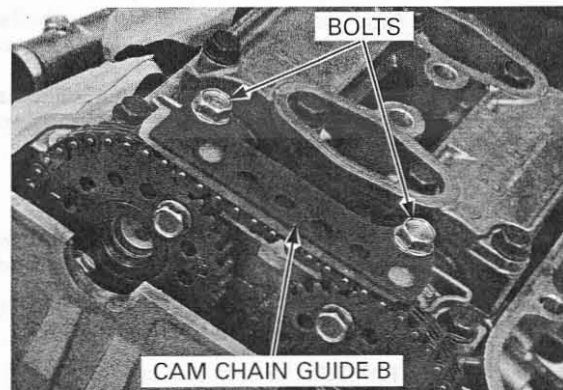

Remove the special tool from the cam chain tensioner lifter.

