



Lubricate the piston with brake fluid.
 Apply silicone grease to the new O-rings and install them to the slave cylinder piston grooves.
 Install the spring into the boss of the piston.
 Install the spring and piston into the slave cylinder.

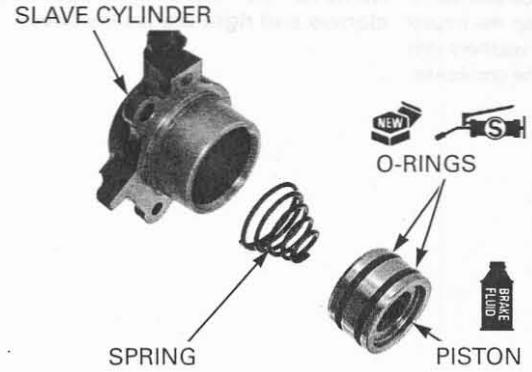

INSTALLATION


Install the dowel pins and new gasket.
 Apply silicone grease to the top of the push rod.
 Install the slave cylinder onto the left crankcase rear cover.

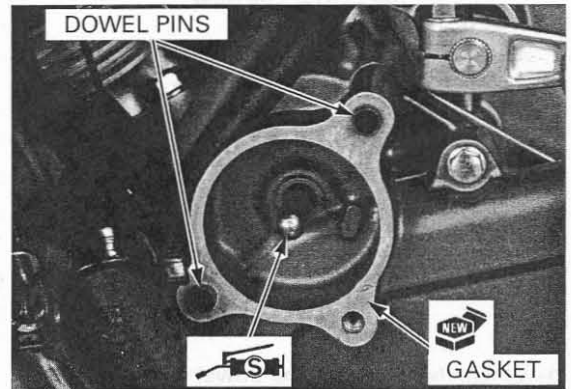

Install and tighten the SH bolts.
 Install the clutch hose eyelet with the oil bolt and new sealing washers.
 While pushing the clutch hose against the stopper, tighten the oil bolt to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)

Fill the reservoir to the upper level and bleed the hydraulic system (page 10-6).

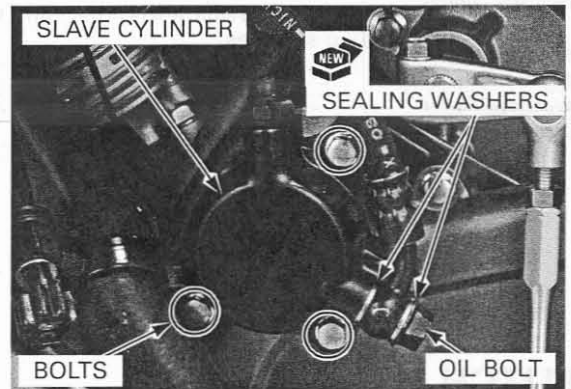

RIGHT CRANKCASE COVER REMOVAL

Remove the under cowls/middle cowls (page 3-7)
 Drain the engine oil (page 4-22).
 Disconnect the crankshaft position sensor 2P (Red) connector.

