




Remove the washers and needle bearings from the balancer weight assembly.

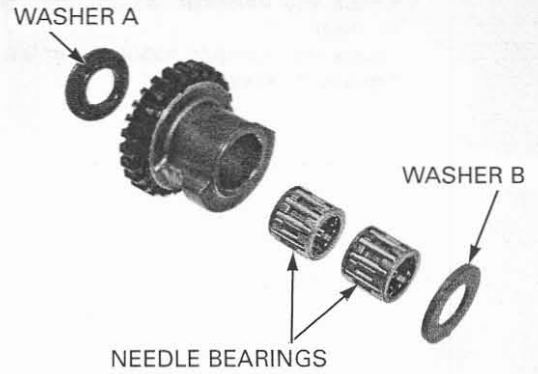

Remove the balancer gear assembly from the balancer weight.

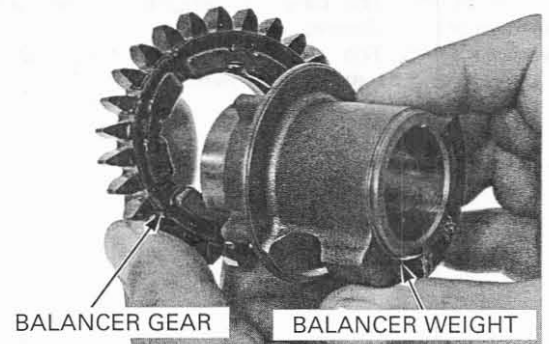

Remove the damper rubbers from the balancer gear.

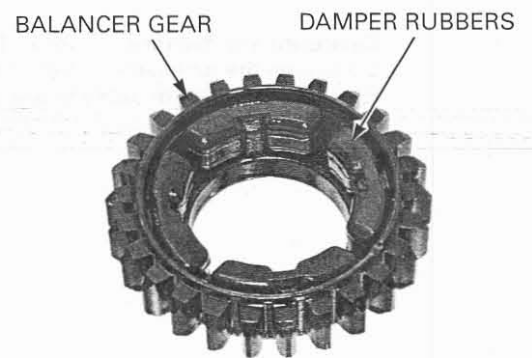

INSPECTION

Replace the balancer weight, balancer shaft, needle bearing as a set

Check the needle bearing for wear or damage, replace if necessary.

