



Hold the damper rod adjust case, then loosen the lock nut.
Remove the lock nut and fork bolt.

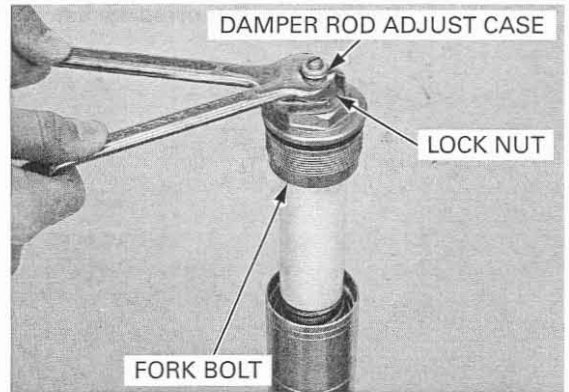

Remove the following:

- Joint collar
- Spring collar
- Fork spring

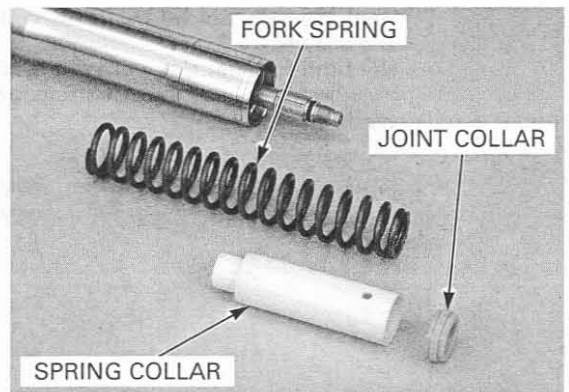

Remove the O-ring from the damper rod adjust case.



Pour out the fork fluid by pumping the fork tube several times.
Pour out the fork fluid from the fork damper by pumping the damper rod several times.

