


Connect the 2P (Black) connector.

Install a washer between the steering damper second arm and top bridge.


Install the steering damper onto the top bridge, then install the washers and steering damper second arm bolt.

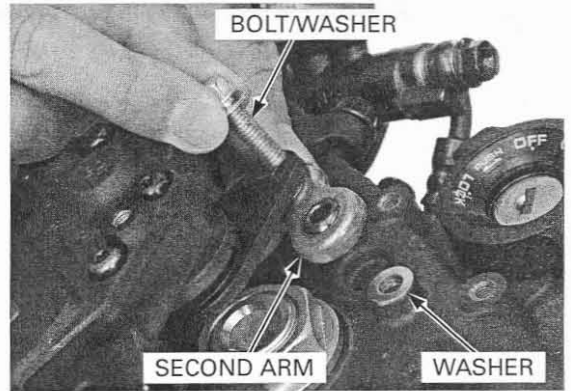

Install the steering damper mounting bolts, and tighten the second arm bolt and mounting bolts to the specified torque.

TORQUE: 8.8 N·m (0.9 kgf·m, 6.5 lbf·ft)

Install the removed parts in the reverse order of removal.

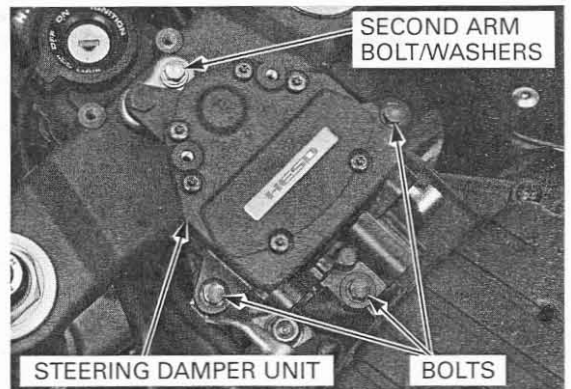

STEERING STEM

REMOVAL

Remove the following:

- Front wheel (page 14-16)
- Front fender (page 3-19)
- Upper cowl (page 3-12)
- Top shelter (page 3-16)
- Steering damper (page 14-34)

Remove the steering stem nut.

Remove the fork legs (page 14-21).



Remove the bolts and wind protector.
Remove the bolt and horn unit.

