



FRONT WHEEL/SUSPENSION/STEERING

Install the front brake hose clamp and tighten the bolt to the specified torque.

TORQUE: 8.8 N·m (0.9 kgf·m, 6.5 lbf·ft)

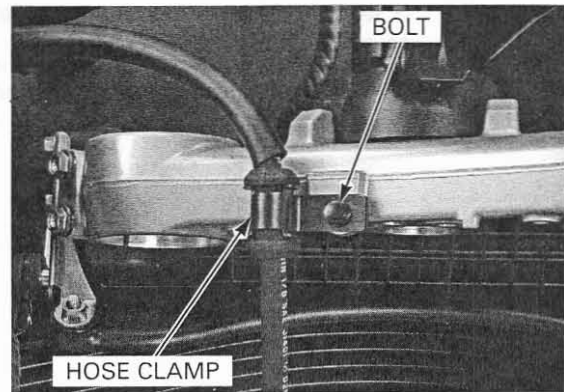

Install the horn unit and tighten the bolt securely. Install the wind protector and tighten the bolts.

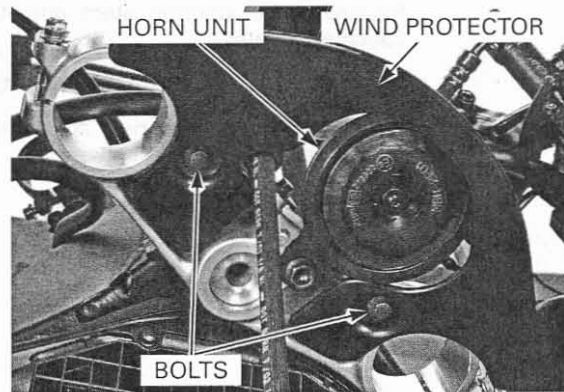

Install the following:


- Fork legs (page 14-33)
- Handlebars (page 14-11)

Install the top bridge and steering stem nut. Tighten the steering stem nut to the specified torque.

TORQUE: 103 N·m (10.5 kgf·m, 76 lbf·ft)

Install the following:

- Steering damper (page 14-34)
- Top shelter (page 3-16)
- Upper cowl (page 3-12)
- Front fender (page 3-19)
- Front wheel (page 14-20)

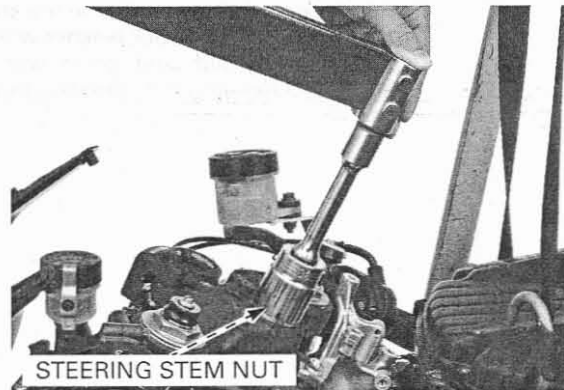

STEERING HEAD BEARING PRE-LOAD

Support the motorcycle securely using a hoist or equivalent and raise the front wheel off the ground. Position the steering stem to the straight ahead position.

Make sure that there is no cable or wire harness interference.

Hook a spring scale to the fork slider and measure the steering head bearing pre-load.

The pre-load should be within 12 – 19 N (1.2 – 1.9 kgf).

If the readings do not fall within the limits, readjust the steering stem adjusting nut (page 14-42).

