


ELECTRIC STARTER

CONTINUITY INSPECTION

Disconnect the starter relay switch 4P connector and cables.
Connect a fully charged 12 V battery positive wire to the relay switch Yellow/red wire terminal and negative wire to the Green/red wire terminal.

There should be continuity between the large terminals while the battery is connected, and no continuity when the battery is disconnected.

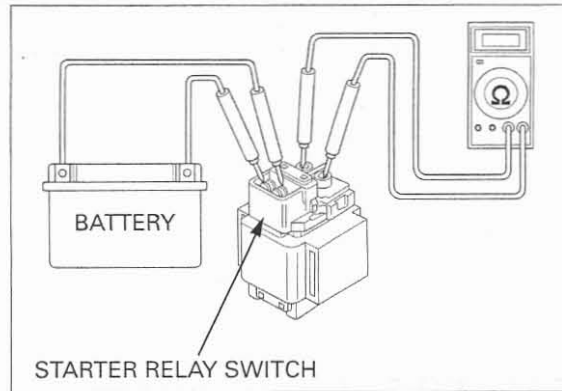


DIODE

REMOVAL/INSTALLATION

Remove the left middle cowl (page 3-7)

Open the fuse box and remove the diode.

Install the diode in the reverse order of removal.

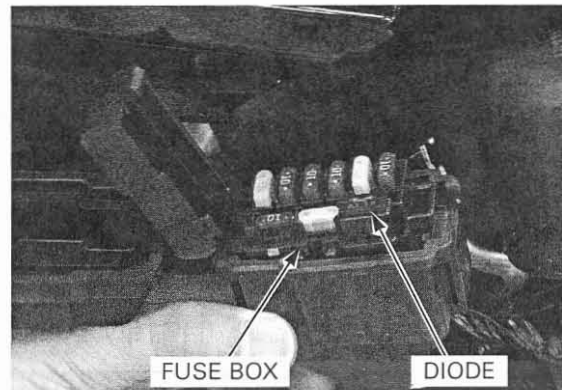

INSPECTION

Check for continuity between the diode terminals.
When there is continuity, a small resistance value will register.

If there is continuity, in one direction, the diode is normal.

