


LIGHTS/METERS/SWITCHES

Install the dust cover tightly against the headlight unit with its arrow mark facing up.


Connect the headlight bulb connector.

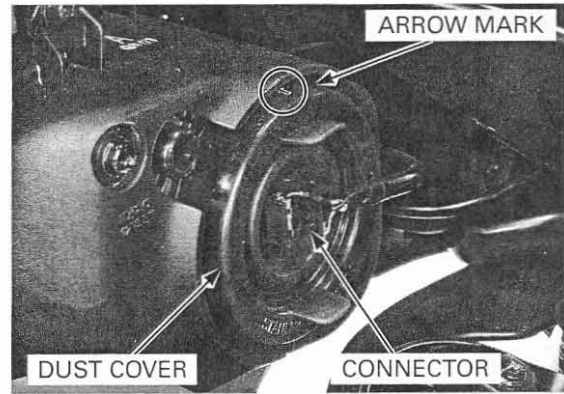

REMOVAL/INSTALLATION

Remove the upper cowl (page 3-12).


Remove the nuts and bank angle sensor.

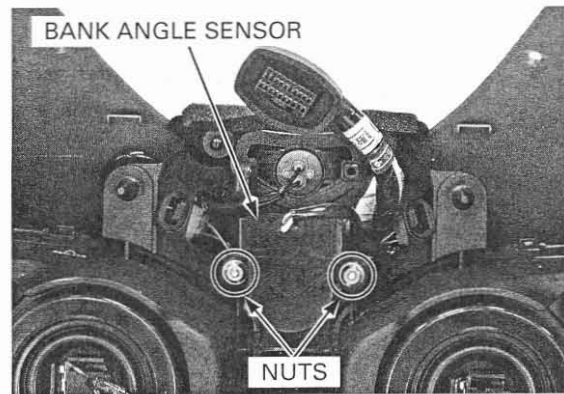

Remove the five screws/washers and headlight unit.

Route the wire harness properly (page 1-24).

Install the headlight unit in the reverse order of removal.

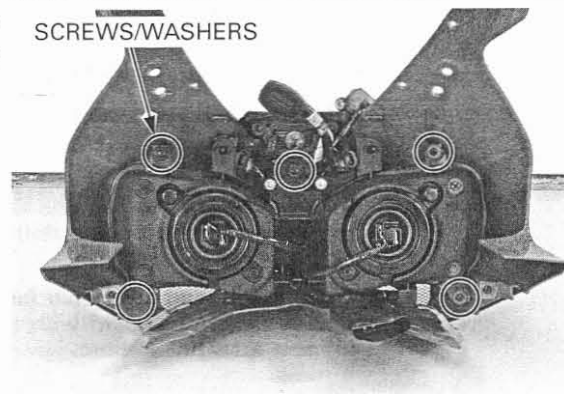

POSITION LIGHT

BULB REPLACEMENT

Remove the windscreen (page 3-12).

Remove the screws and position light lens.

