

MAP SENSOR REMOVAL/INSTALLATION


Support the front end of the fuel tank (page 3-5).

Disconnect the MAP sensor connector.
Remove the screw and MAP sensor from the throttle body.

Installation is in the reverse order of removal.

NOTE:

Align the MAP sensor boss with the hole in the fuel pipe.

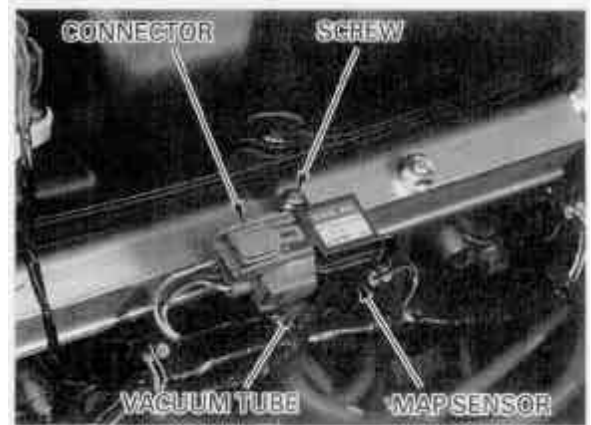


IAT SENSOR

REMOVAL/INSTALLATION

Support the front end of the fuel tank (page 3-5).

Disconnect the IAT sensor connector.
Remove the screws and IAT sensor from the air cleaner housing.

Installation is in the reverse order of removal.

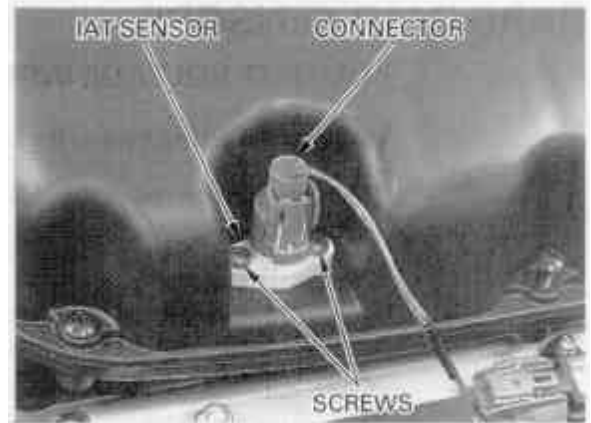

ECT SENSOR

REMOVAL/INSTALLATION

NOTE:

Replace the ECT sensor while the engine is cold.

Drain the coolant from the system (page 6-5).
Support the front end of the fuel tank (page 3-5).

Disconnect the ECT sensor connector from the sensor.
Remove the ECT sensor and sealing washer.



Always replace a sealing washer with a new one.

Install the new sealing washer and ECT sensor.
Tighten the ECT sensor to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

Fill the cooling system with recommended coolant (page 6-5).