

## TOOLS

Steering stem socket	07916-3710101 or 07936-3710100
Ball race remover set	07946-KM90001
– Driver attachment, A	07946-KM90100
– Driver attachment, B	07946-KM90200
– Driver shaft assembly	07946-KM90300
– Bearing remover, A	07946-KM90401
– Bearing remover, B	07946-KM90500
– Assembly base	07946-KM90600
Steering stem driver	07946-MB00000
Oil seal driver	07947-KA40200
Slider weight	07947-KA50100
Driver	07749-0010000
Attachment, 42 × 47 mm	07746-0010300
Pilot, 20 mm	07746-0040500
Bearing remover shaft	07746-0050100
Bearing remover head, 20 mm	07746-0050600

## TROUBLESHOOTING

### Hard steering

- Faulty or damaged steering head bearings
- Insufficient tire pressure
- Steering head bearing adjustment nut too tight

### Steers to one side or does not track straight

- Unevenly adjusted right and left fork legs
- Bent fork
- Bent axle
- Wheel installed incorrectly
- Faulty steering head bearings
- Bent frame
- Worn wheel bearing
- Worn swingarm pivot components

### Front wheel wobbling

- Bent rim
- Worn front wheel bearings
- Faulty tire
- Unbalanced tire and wheel

### Wheel turns hard

- Faulty wheel bearing
- Faulty speedometer gear
- Bent front axle
- Brake drag

### Soft suspension

- Insufficient fluid in fork
- Weak fork springs
- Tire pressure too low

### Hard suspension

- Incorrect fluid weight
- Bent fork tubes
- Clogged fork fluid passage

### Front suspension noisy

- Insufficient fluid in fork
- Loose fork fasteners