


Fuel Tank Removal/Installation

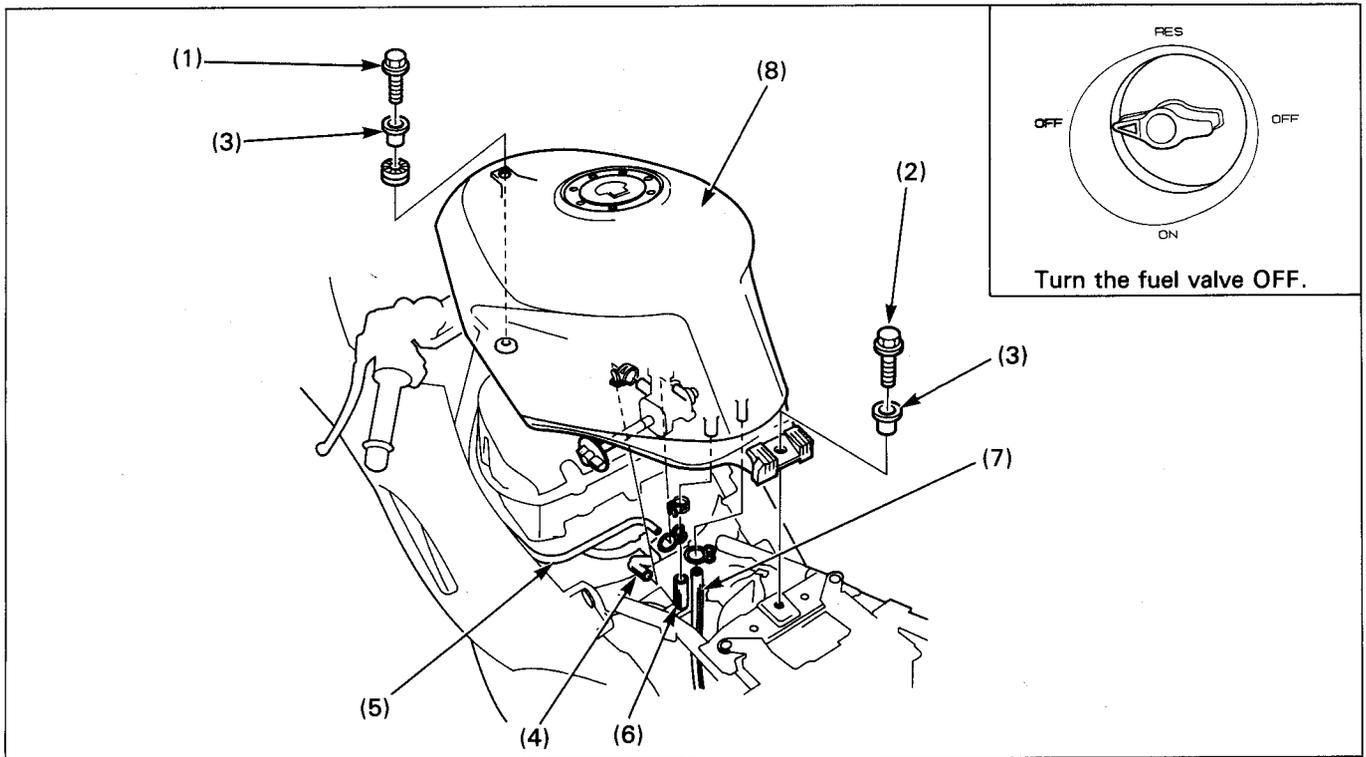

⚠ WARNING

- Gasoline is extremely flammable and is explosive under certain condition.

Requisite Service

- Seat removal/installation(page 2-2)

Procedure	Q'ty	Remarks
Removal Order		Installation is in the reverse order of removal.
(1) Fuel tank mounting bolt(6mm)	1	Before disconnecting, turn the fuel valve OFF.
(2) Fuel tank mounting bolt(8mm)	1	
(3) Flange collar	2	
(4) Fuel tube	1	
(5) Auto fuel valve vacuum tube	1	
(6) Fuel tank drain tube	1	
(7) Fuel tank vent tube	1	
(8) Fuel tank	1	