

WATER PUMP INSTALLATION

Inspect water pump shaft, gears for damage



Install R. crankcase cover (8-15)

Install washer into shaft and install impellor into shaft

Torque: 1.0-1.4 Kg-m

Install new gasket into water pump cover and install R crankcase cover


Tighten bolt
Insert radiator fluid (5-4)

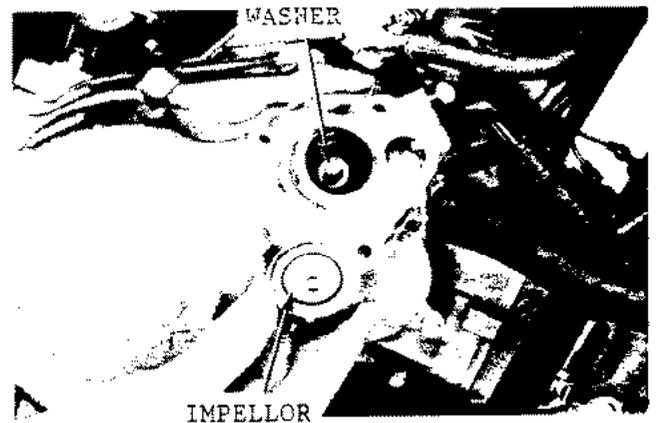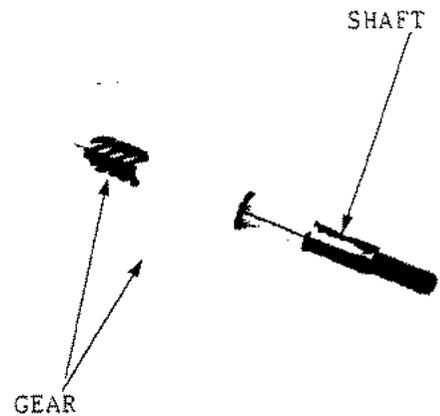

RESERVOIR TANK

Removal

Remove lower fairing (15-3)
Remove overflow tube and drain tube from reservoir tank.
Remove 2 bolts and remove reservoir tank

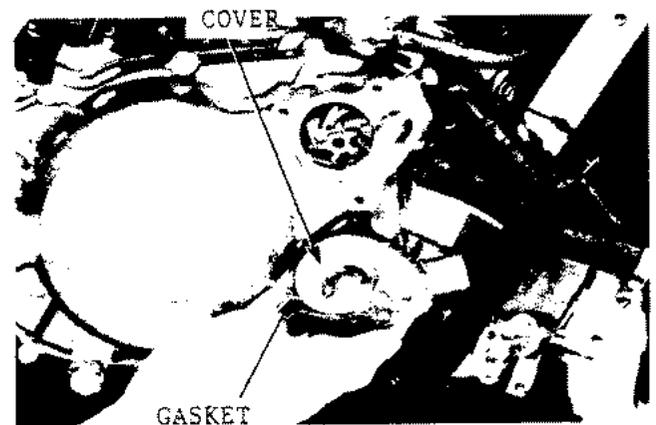

installation

Install in reverse order to removal

