

## ENGINE REMOVAL

Place vehicle on flat ground and raise frame

Remove the following parts:

- seat, side covers, lower fairing (section 15)
- Fuel tank ( 4-2)
- battery ( 16-3)

Drain transmission oil ( 2-9)

Drain radiator fluid ( 5-4)

Remove the following parts:-

- air cleaner case
- carburettor ( 4-4)
- radiator
- cylinder head water hose ( 7-3)
- RC valve control cable ( 19-3)
- oil tube
- exhaust chamber/silencer
- spark plug cap
- radiator fluid reservoir tank
- AC generator wire coupler
- Pulse generator wire coupler
- L.crankcase cover
- drive sprocket
- change pedal
- clutch cable

