


REAR CRANKCASE COVER

Removal

Remove R. lower fairing (section 15)
Drain transmission oil (2.9)
Drain radiator (5.4)
Remove bolt and remove kick pedal
Remove water joint bolt

Remove 12 bolts and remove R. crankcase cover
Remove gasket and knock pin

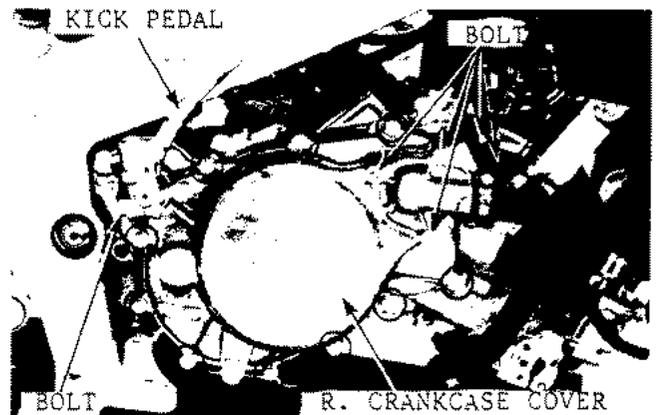

CLUTCH REMOVAL

Remove R crankcase cover
Remove 5 bolts and remove pressure plate and clutch springs

* Loosen opposite bolts on pressure plate little by little

Remove clutch lifter guide, lifter guide inner steel ball and clutch lifter rod.

* Hold clutch lever and move lifter rod a little to remove

Remove: clutch discs, clutch plates

Steady clutch with clutch centre holder and remove clutch centre lock nut

Standard tool:

Clutch centre holder 07724-0050000

Remove washer

