

TRANSMISSION REMOVAL

Remove lower fairing (15.3)


Remove the following

- clutch (8.3)

- kickstarter (8.7)

Gearshift linkage (8.8)


Raise plate tabs, remove drive sprocket bolts, lock plate and drive sprocket

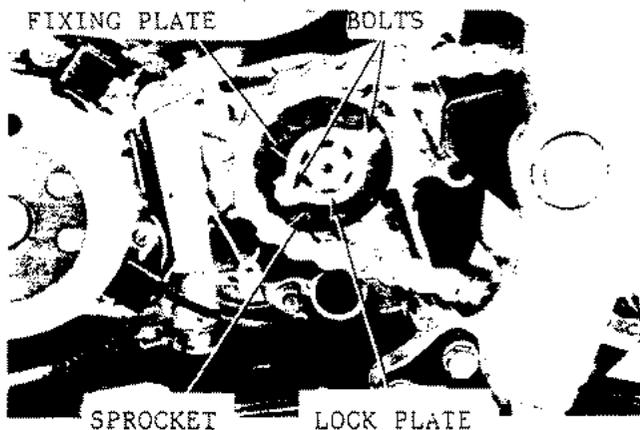

Remove 6 bolts


While lightly knocking counter shaft from drive sprocket side, remove transmission and bearing holder as as assembly

Remove knock pin

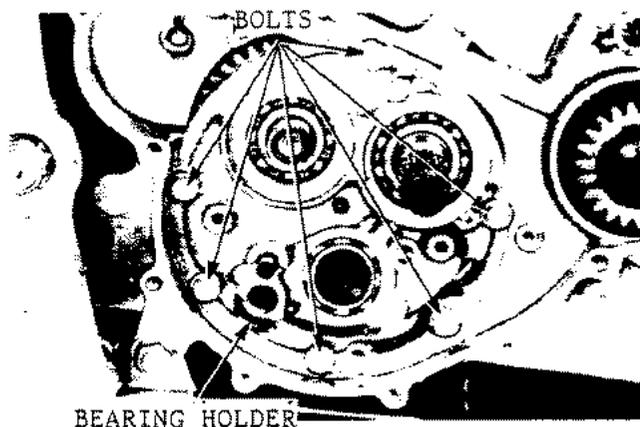

Inspect each gears backlash

Service Limit: 0.30mm (replace if above)

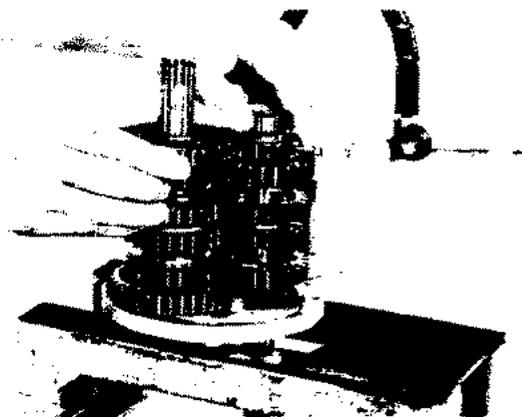

Pull shift fork shaft and remove shift fork and shaft drum

