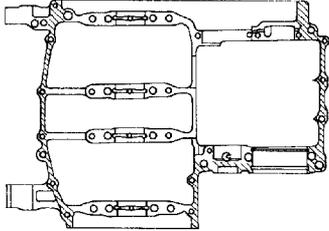
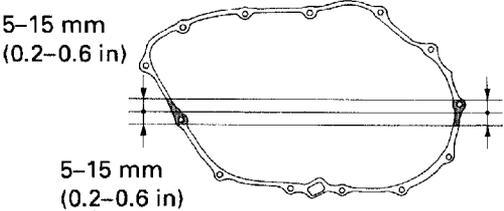
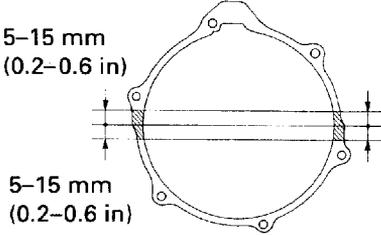
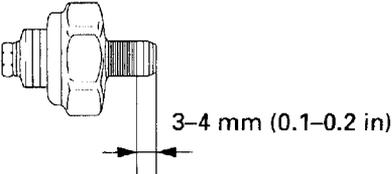


After '93

Engine	Location	Material	Remarks
<p>Upper and lower crankcase mating surface</p>  <p>Right crankcase cover gasket surfaces of the crankcase</p>  <p>Alternator cover gasket surfaces of the crankcase</p>  <p>Oil pressure switch threads</p> 	<p>Liquid sealant</p>	<p>Apply to the area as shown.</p> <p>Apply to the area as shown.</p> <p>Apply to the area shown.</p> <p>Do not apply sealant to the thread head as shown.</p>	
<p>Semicircular portions of the cylinder head Alternator wire grommet seating surface Thermosensor threads</p>	<p>Sealant</p>	<p>Do not apply sealant to the sensor head.</p>	