

Rear Fairing

'90-'93:


Remove the seat (page 2-2).

Disconnect the rear turn signal connectors and brake/taillight connector.

Remove the six bolts and unhook the tabs on the rear fairing from the frame.

Remove the rear fairing by sliding it rearward.

Install the rear fairing in the reverse order of removal.

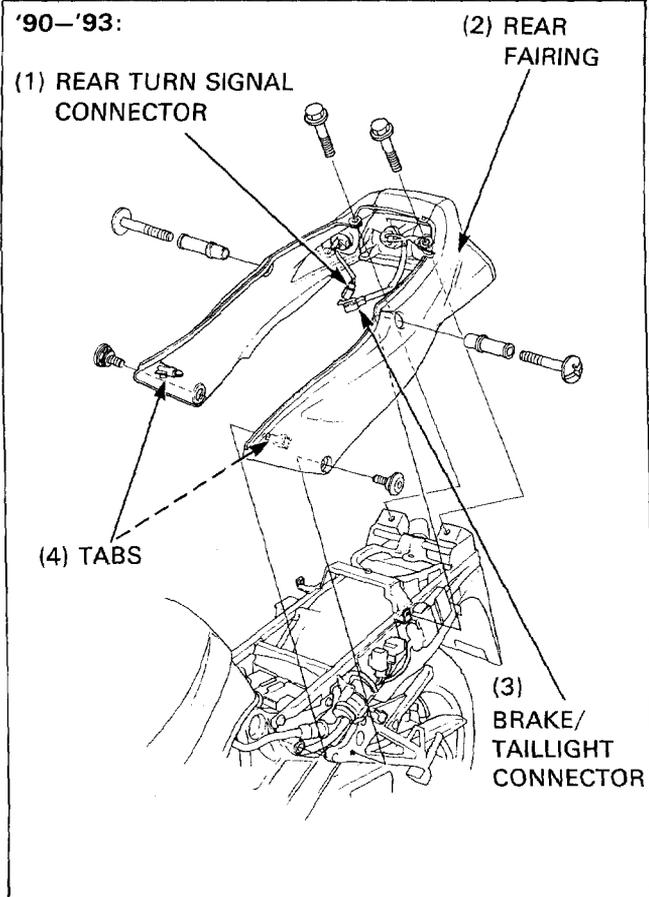

After '93:

Remove the seat (page 2-2).

Disconnect the rear turn signal & tail/brake light connector (6P White) inside the left side of the rear fairing.

Remove the grab rail bolts and washes, slide the grab rails inward and remove them from the frame pipes.

Remove the screws and distance collars.

Remove the socket bolts.

Release the fairing bosses from the grommets.

Remove the fairing rearward while carefully spreading open the front end.

CAUTION

- Be careful not to damage the fairing.

Installation is in the reverse order of removal.

TORQUE:

Rear grab rail bolt: 35 N·m (3.5 kg·m, 25 ft·lb)

