

Lower Center Fairing

'90:

Remove the middle fairing and lower fairing (page 2-4 and 2-7).

Remove the socket bolts.

Release the trim clips by turning center pin with a screw driver and remove the trim clips.

Remove the lower center fairing.

CAUTION


- Be careful not to damage the fairing.

Installation is in the reverse order of removal.

NOTE

- When installing the trim clips, lock by pushing the center pin flush.

'90:

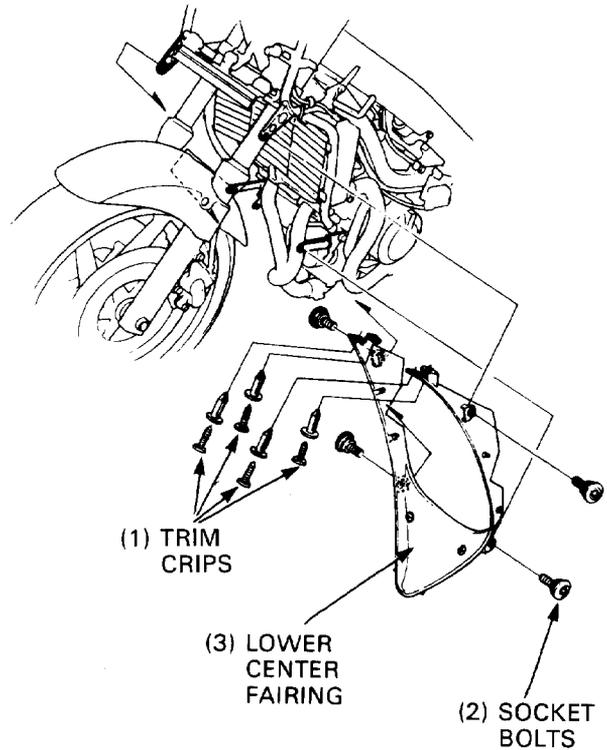

'91-'93:

Remove the middle fairing and lower fairing (page 2-4 and 2-7).

Remove the following:

- Trim clips (see above)
- Self-Tapping screws
- Grommets
- Packings
- Lower center fairing

CAUTION

- Be careful not to damage the fairing.

Installation is in the reverse order of removal.

'91-'93:

