

Coolant Draining

NOTE

- For coolant replacement, refer to section 5 of the Common Service Manual.

CAUTION

- **Wait until the engine is cool before servicing the cooling system. Removing the radiator cap while the engine is hot and the coolant is under pressure may cause serious scalding.**

To drain the coolant, remove the following.

- fuse box
- radiator cap
- water pump drain bolt and sealing washer

Remove the cylinder drain bolts and sealing washers and drain the coolant completely from the system.

