


Air Cleaner Housing Removal/Installation

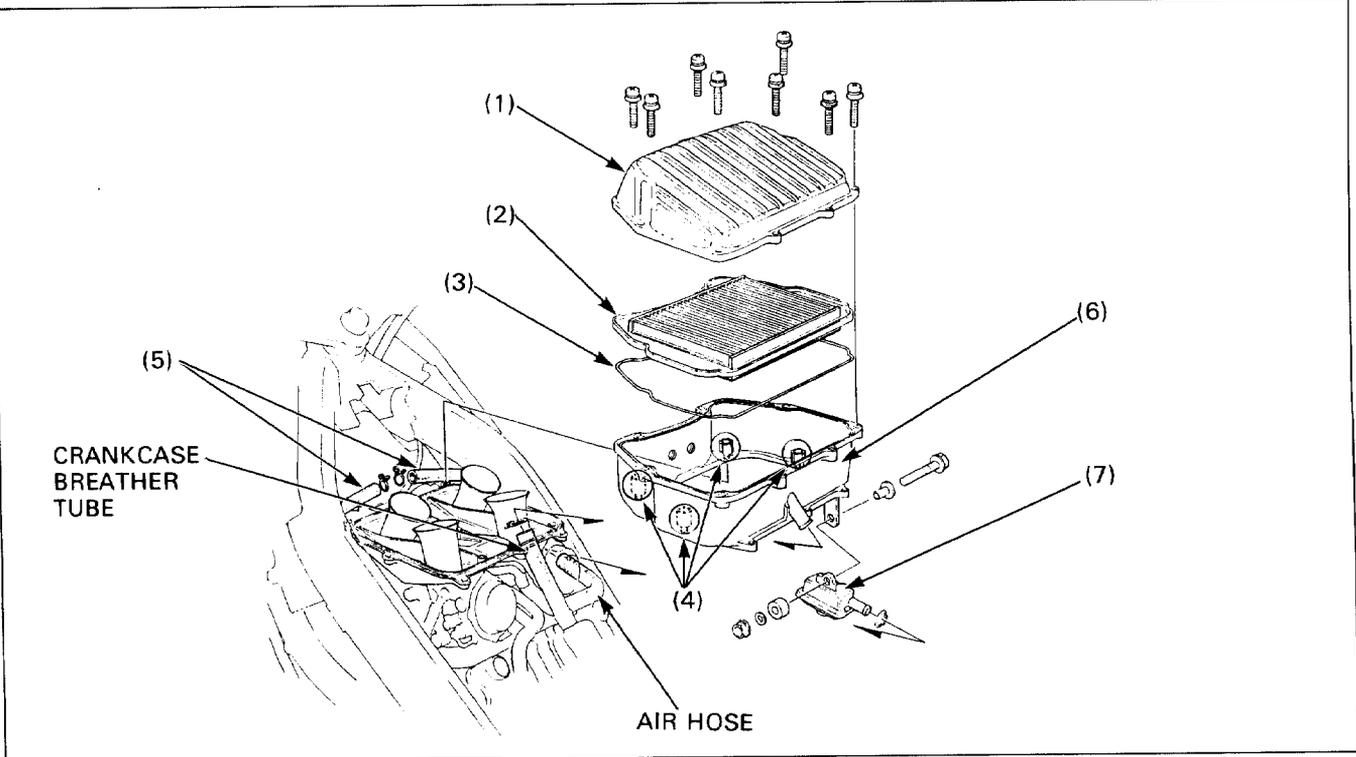

Requisite Service

- Fuel tank removal/installation (page 2-22)

Procedure	Q'ty	Remarks
Removal Order		• Installation is in the reverse order of removal.
(1) Air cleaner housing cover	1	
(2) Air cleaner	1	
(3) O-ring	1	
(4) Air cleaner housing mounting screw	4	
(5) Air suction hose (No. 15)	2	U.S.A. only
(6) Air cleaner housing	1	Disconnect the crankcase breather tube from the air cleaner housing. Disconnect the air hose from the sub air cleaner housing.
(7) Sub air cleaner housing	1	Refer to page 3-6 for disassembly/assembly.