


Bearing Holder Removal/Installation

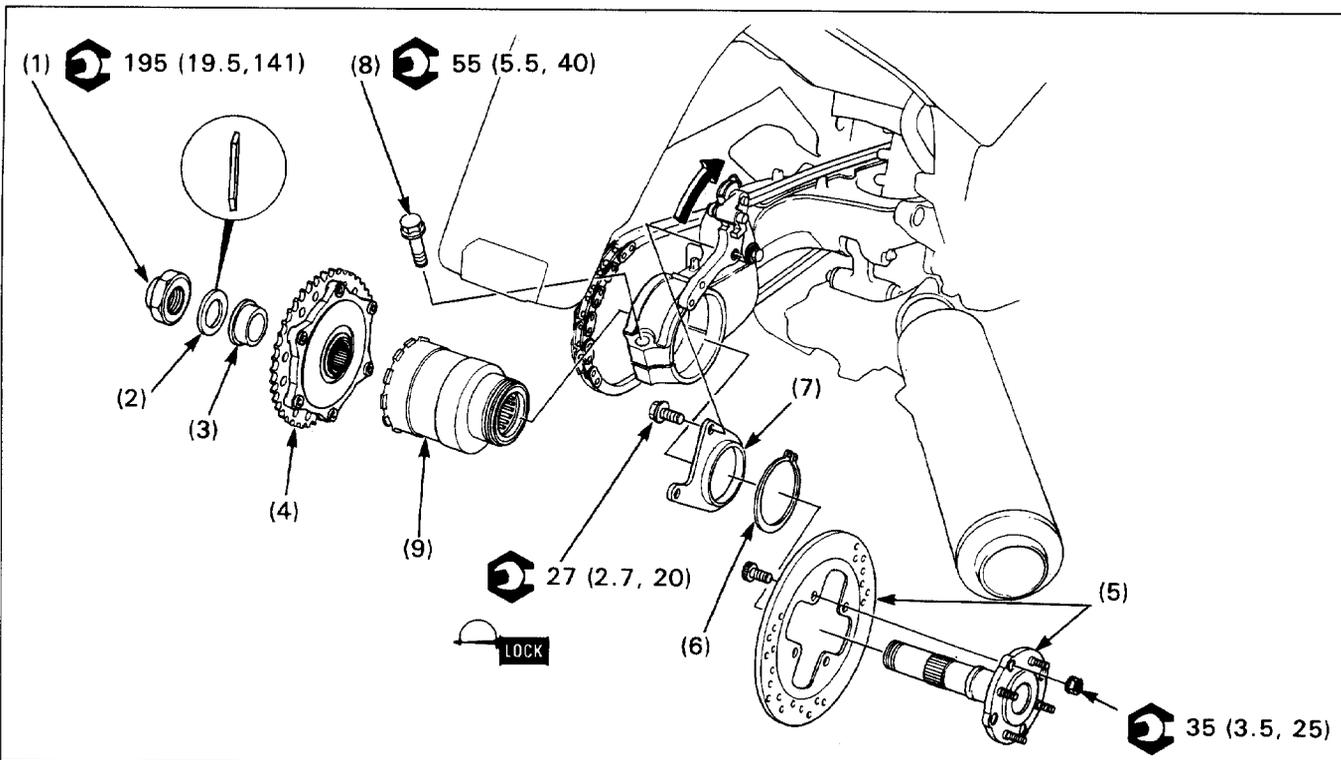

WARNING

- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.

NOTE

- Do not depress the brake pedal when the caliper is removed, or it will be difficult to refit the disc between the brake pads.

Requisite Service

- Rear wheel removal/installation (page 13-2)

Procedure	Q'ty	Remarks
Disassembly Order		• Assembly is in the reverse order of disassembly.
(1) Rear axle nut	1	Unstake the nut before removing.
(2) Spring washer	1	Install in the direction as shown.
(3) Flange collar	1	
(4) Driven sprocket	1	
(5) Rear axle/brake disc	1/1	Before removing, detach the caliper from the disc by pivoting upward as shown.
(6) Snap ring	1	Install chamfered side facing in.
(7) Caliper stay	1	
(8) Bearing holder pinch bolt	1	Only loosen, not necessary to remove.
(9) Bearing holder	1	Refer to page 13-4 for disassembly/assembly.