


## Shock Absorber Disassembly/Assembly ('90-'93 Only)

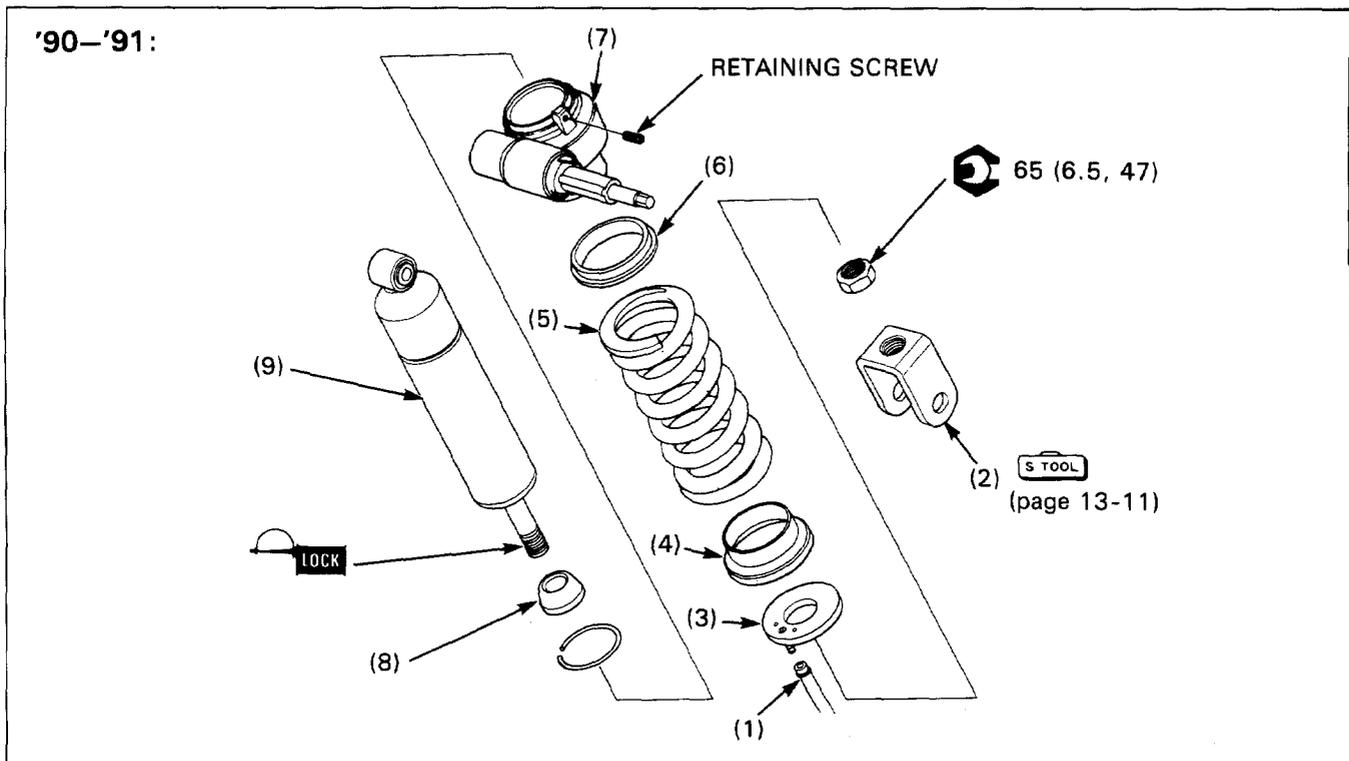

**▲ WARNING**

- The shock absorber contains nitrogen under high pressure. Do not allow fire or heat near the shock absorber.
  - Before disposal of the shock absorber, release the nitrogen.
- (See: section 19 of the Common Service Manual; Drilling point for disposal: page 1-13)

## Requisite Service

- Shock absorber removal/installation (page 13-6)

Procedure		Q'ty	Remarks
	<b>Disassembly Order</b>		• Assembly is in the reverse order of disassembly.
(1)	Drain tube	1	NOTE: • Refer to page 13-11 for removal/installation.
(2)	Lower joint	1	
(3)	Spring seat stopper	1	Install with the tapered end facing the adjuster.
(4)	Spring seat	1	
(5)	Spring	1	Remove after loosening the retaining screw. Install so that retaining screw aligns with the "O" mark on the damper.
(6)	Spring seat	1	
(7)	Adjuster	1	Apply a locking agent to the damper rod threads at assembly.
(8)	Damper rubber	1	
(9)	Damper assembly	1	