


**Shock Link Bearing Replacement (After '93)**

Press the needle bearings out of the shock link.

**S. TOOL**  
**Pin driver assembly** **07GMD-KT80100**

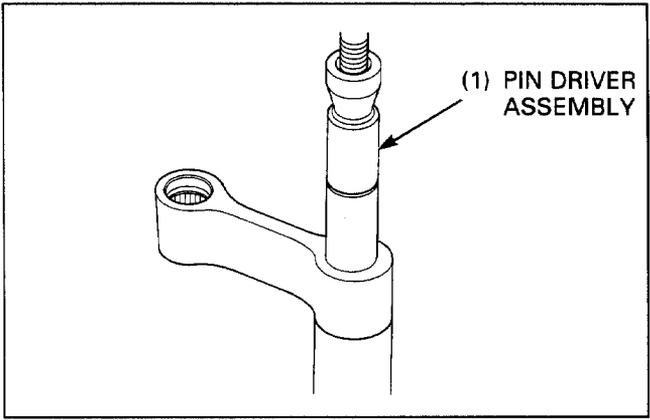

Press a new needle bearings into the shock link so that the needle bearing surface is lower 5.5 mm (0.22 in ) from the end of the shock link.

**S. TOOL**  
**Driver** **07749-0010000**  
**Attachment, 24 x 26 mm** **07746-0010700**  
**Pilot, 17 mm** **07746-0040400**

**NOTE**  
 • Press the bearing with the marked side facing up.

