

Shock Arm Pivot Bearing Replacement (After '93)


Removal

Remove the pivot collar and dust seals.
Press the needle bearing out of the swingram.

S TOOL

Pin driver assembly

07GMD-KT80100

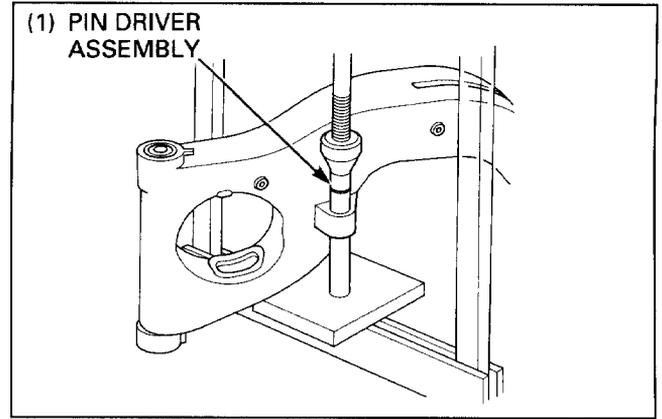

Installation

Pack the new needle bearing with grease.
Press the needle bearing into the swingram so that the needle bearing surface is lower 5.5 mm (0.22 in) from the end of the swingram.

S TOOL

Driver
Attachment, 24 x 26 mm
Pilot, 17 mm

07749-001000

07746-0010700

07746-0040400

NOTE

- Press the bearing with the marked side facing up.

