


Rear Brake Caliper Disassembly/Assembly

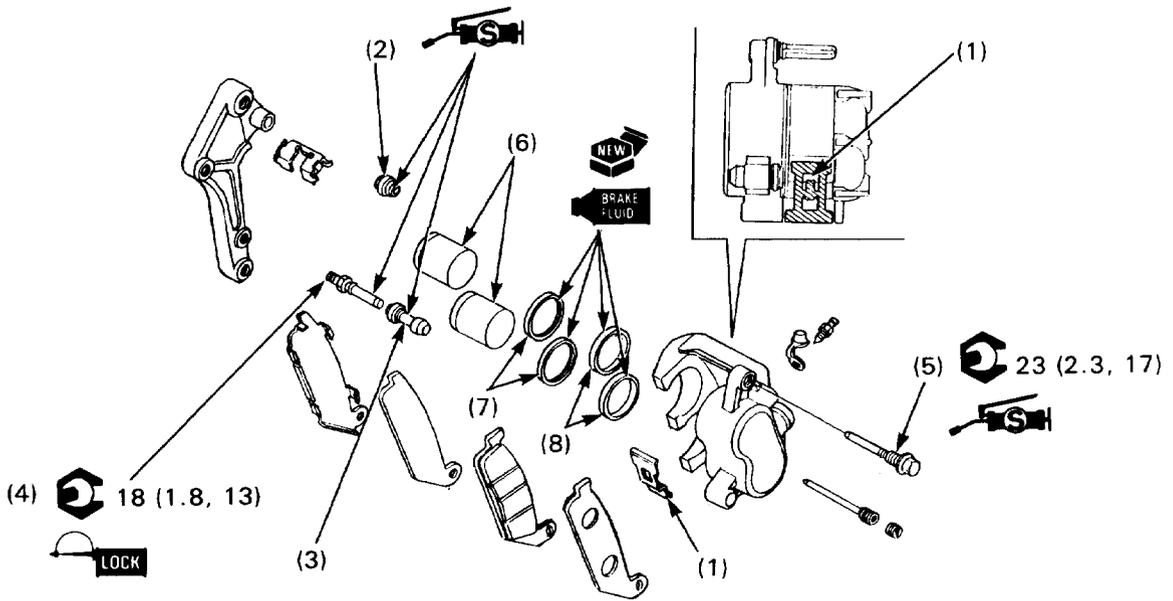

WARNING

- Inhaled asbestos fibers have been found to cause respiratory disease and cancer. Never use an air hose or dry brush to clean brake assemblies. Use an OSHA-approved vacuum cleaner or alternate method approved by OSHA designed to minimize the hazard caused by airborne asbestos fibers.

Requisite Service

- Rear brake pad removal/installation (page 14-3)
- Brake fluid replacement/air bleeding (section 17 of the Common Service Manual)
- Rear brake caliper removal/installation (page 14-10)

Procedure	Q'ty	Remarks
Disassembly Order		• Assembly is in the reverse order of disassembly.
(1) Pad spring	1	
(2) Bracket pin boot	1	Install into the bracket groove securely.
(3) Caliper pin boot	1	
(4) Bracket pin bolt	1	When installing, apply a locking agent on threaded portion.
(5) Caliper pin bolt	1	
(6) Caliper piston	2	Install them with the opening toward the pad.
(7) Dust seal	2	CAUTION • Be careful not to damage the piston sliding surface when removing seals.
(8) Piston seal	2	