

Troubleshooting

No spark at all plugs (Faulty input system)

- If there is no spark at all plugs, the problem could be at the input of the ignition system (ignition pulse generator, power input circuit of the ignition control module (ICM), neutral switch, side stand switch or ICM).

