



Install the oil pump bolts and tighten them.

TORQUE: 12 N-m (1.2 kgf-m , 9 lbf-ft)

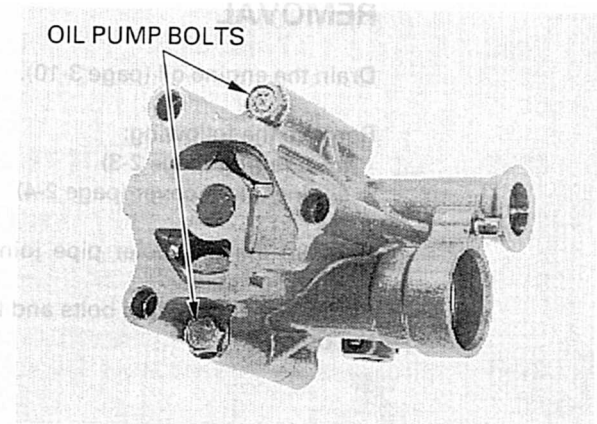

INSTALLATION


Install the dowel pins.

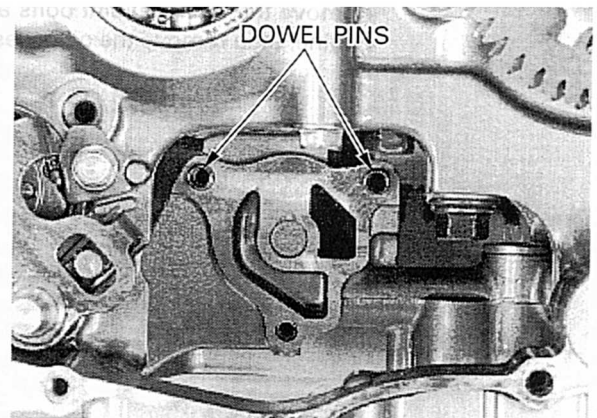

Install the oil pump and tighten the mounting bolts securely.

Install the clutch (page 9-17).

Install the oil pan (page 4-6).

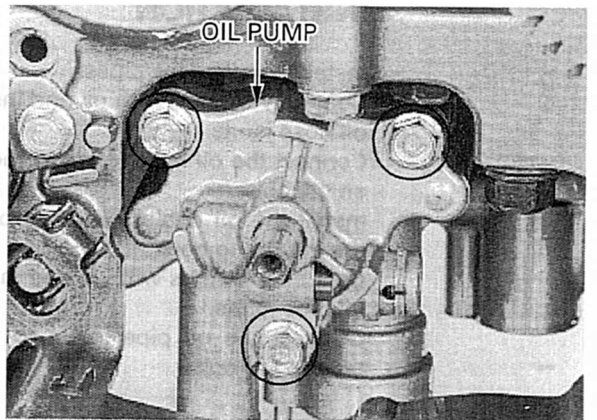

OIL COOLER

INSPECTION

Remove the front fairing (page 2-3).

Check the oil cooler pipe joints and seams for leaks. Check the oil cooler air passage for clogging or damage.

Straighten bent fins with a small, flat blade screwdriver and remove insects, mud or other obstructions with compressed air or low pressure water.

