


## ENGINE REMOVAL/INSTALLATION

Remove the shock link bracket mounting nuts, bolts, brackets with the side stand and four dowel pins.

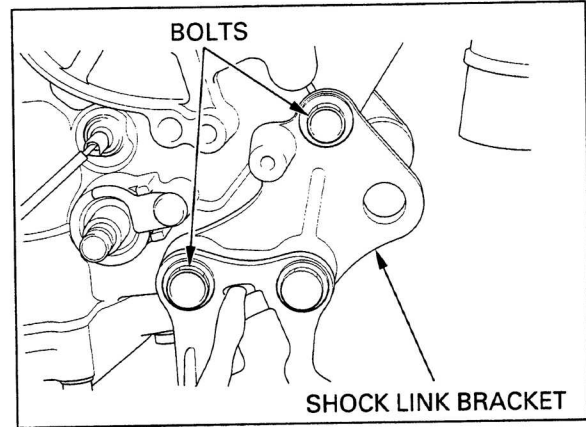


Place a floor jack or other adjustable support under the engine.

**NOTE:**

The jack height must be continually adjusted to relieve stress for ease of bolt removal.

Loosen and remove the front engine hanger nut, center engine hanger bolt and rear engine hanger nut from the right side.

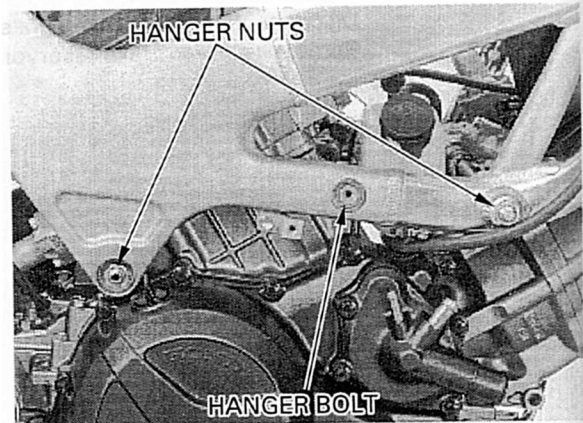

Hold each hanger bolt and loosen each lock nut using the special tool.


**TOOLS:**

**Front and center:**

**Lock nut wrench**      07VMA-MBB0100

**Rear:**

**Lock nut wrench**      07HMA-MR70200

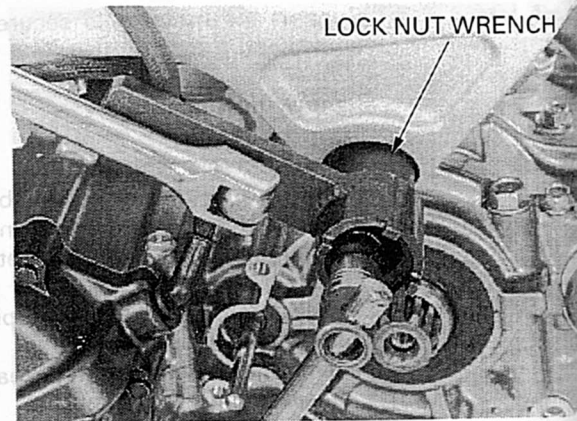

Remove the lock nuts, adjusting bolts, engine hanger bolts and the engine from the frame.

