



INSPECTION

Check the gearshift spindle for bending.
Check the spindle plate for wear or damage.
Check the spindle return spring for fatigue or damage.

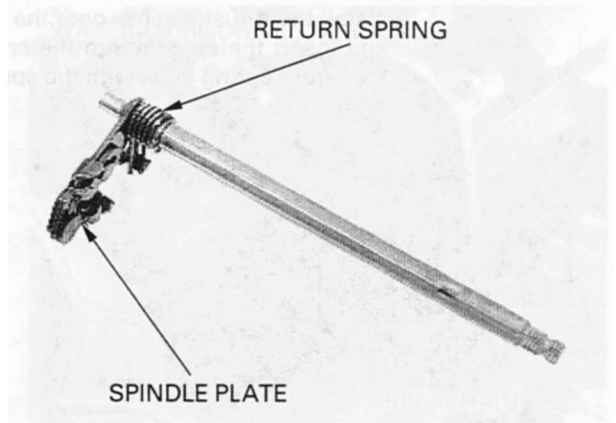


INSTALLATION

Install the washer, return spring, stopper arm and bolt, and tighten the bolt.

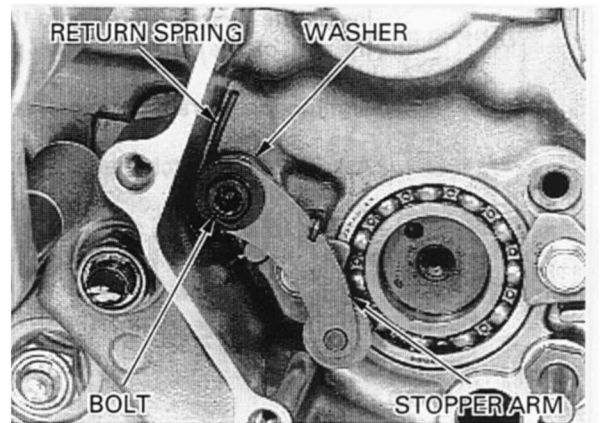

Install the dowel pin into the shift drum.
Lift the stopper arm with a screwdriver and install the gearshift cam by aligning the pin hole in the cam with the dowel pin.

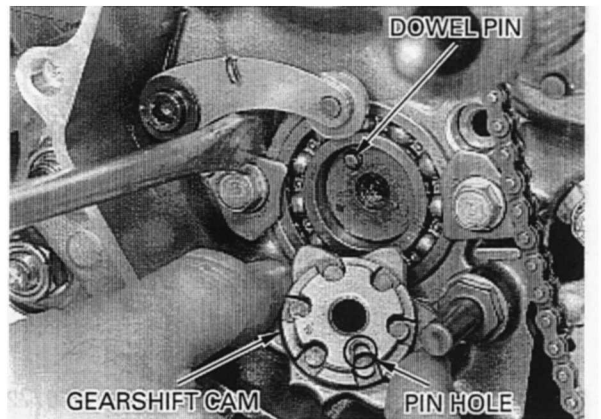

Apply locking agent to the gearshift cam bolt threads.
Install and tighten the bolt.

TORQUE: 23 N·m (2.3 kgf·m , 17 lbf·ft)

