


Install the handlebar weight onto the inner weight, aligning the bosses and grooves each other. Install a new weight mounting screw and tighten it while holding the weight.

TORQUE: 10 N·m (1.0 kgf·m , 7 lbf·ft)

Check the throttle grip operation and free play (page 3-4).

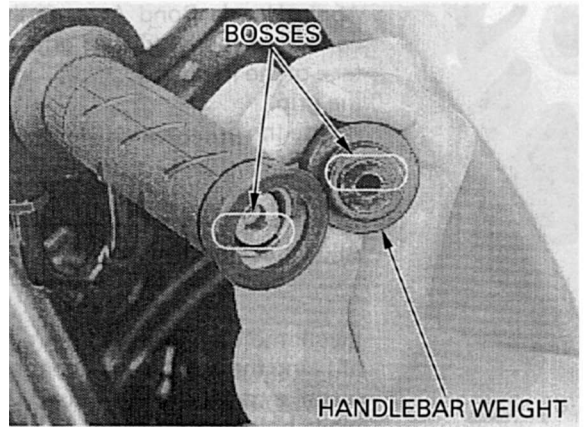

LEFT HANDLEBAR

REMOVAL

Disconnect the clutch switch connectors.
Remove the two bolts, holder and the clutch master cylinder assembly.
Remove the two screws and left handlebar switch.



Hold the handlebar weight and remove the mounting screw and the weight.
Remove the left handlebar grip.



Loosen the handlebar pinch bolt, and remove the stopper ring and handlebar from the fork.

INSTALLATION

Install the handlebar onto the fork, aligning its boss with the groove in the fork top bridge.
Install the stopper ring and tighten the handlebar pinch bolt.

