

REAR WHEEL/SUSPENSION

TOOLS

Bearing remover shaft	07746-0050100
Bearing remover head, 20 mm	07746-0050600
Driver	07749-0010000
Attachment, 42 × 47 mm	07746-0010300
Pilot, 20 mm	07746-0040500
Attachment, 52 × 55 mm	07746-0010400
Pilot, 22 mm	07746-0041000
Pin driver	07GMD-KT80100
Attachment, 24 × 26 mm	07746-0010700
Pilot, 17 mm	07746-0040400
Driver shaft	07946-MJ00100
Needle bearing remover	07HMC-MR70100
Attachment, 32 × 35 mm	07746-0010100
Attachment, 37 × 40 mm	07746-0010200
Pilot, 28 mm	07746-0041100
Bearing remover, 17 mm	07936-3710300
Bearing remover handle	07936-3710100
Sliding weight	07741-0010201

TROUBLESHOOTING

Soft suspension

- Weak shock absorber spring
- Incorrect suspension adjustment
- Oil leakage from damper unit
- Insufficient tire pressure

Hard suspension

- Incorrect suspension adjustment
- Damaged rear suspension pivot bearings
- Bent damper rod
- Tire pressure too high

Rear wheel wobbling

- Bent rim
- Worn or damaged rear wheel bearings
- Faulty rear tire
- Unbalanced rear tire and wheel
- Insufficient rear tire pressure
- Faulty swingarm pivot bearings

Rear wheel turns hard

- Faulty rear wheel bearings
- Bent rear axle
- Rear brake drag
- Drive chain too tight

Rear suspension noise

- Faulty rear shock absorber
- Loose rear suspension fasteners
- Worn rear suspension pivot bearings