

If the light does not come on, check for open circuit in white/green and gray wires.

If the light comes on, check for continuity between the green wire terminal and body ground.

If there is no continuity, check for open circuit in green wire.

If there is continuity, check the connector terminals for loose or poor contact.

If the connector terminals are OK, replace the turn signal relay.