


INSPECTION

Check the piston boot, primary cup and secondary cup for fatigue or damage.

Check the master cylinder and piston for abnormal scratches.


Measure the master cylinder I. D.

SERVICE LIMIT: 14.055 mm (0.5533 in)

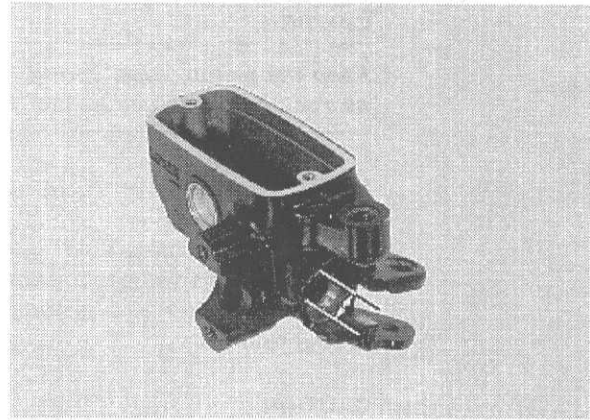

Measure the master cylinder piston O. D.

SERVICE LIMIT: 13.945 mm (0.5490 in)

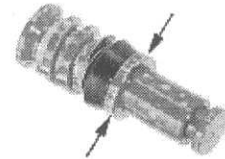

ASSEMBLY

