


FRONT WHEEL/SUSPENSION/STEERING

Place the fork tube in a V-block and measure the runout. Actual runout is 1/2 the total indicator reading.


SERVICE LIMIT: 0.20 mm (0.008 in)

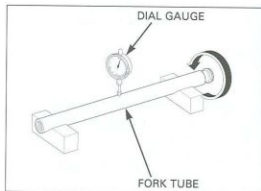

Fork tube bushing

Visually inspect the slider and fork tube bushings. Replace the bushings if there is excessive scoring or scratching, or if the teflon is worn so that the copper surface appears on more than 3/4 of the entire surface.

Check the back-up ring; replace it if there is any distortion at the points shown.

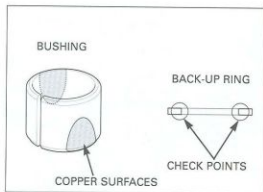

ASSEMBLY

