


## CYLINDER HEAD INSPECTION

### CYLINDER HEAD


*Avoid damaging the gasket surface.*

Remove carbon deposits from the combustion chambers.  
Check the spark plug hole and valve areas for cracks.

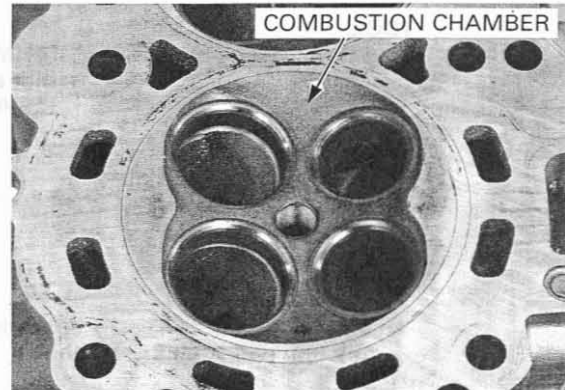

Check the cylinder head for warpage with a straight edge and feeler gauge.


**SERVICE LIMIT: 0.10 mm (0.004 in)**

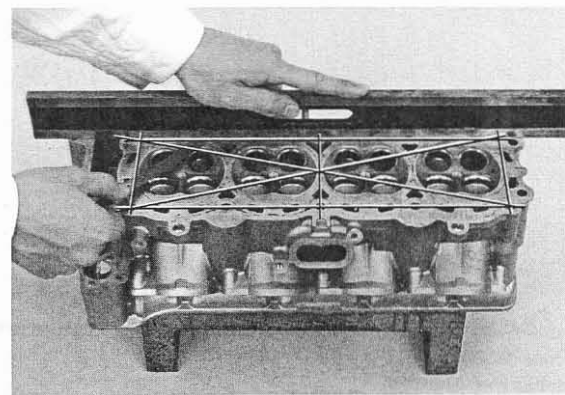

### VALVE LIFTER BORE

Inspect each valve lifter bore for scratches or abnormal wear.  
Measure the each valve lifter bore I.D.

**SERVICE LIMIT: 26.04 mm (1.025 in)**

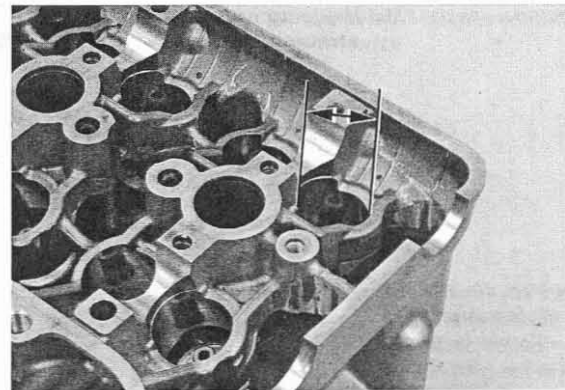

### VALVE LIFTER

Inspect each valve lifter for scratches or abnormal wear.  
Measure the each valve lifter O.D.

**SERVICE LIMIT: 25.97 mm (1.022 in)**

