


Inspection:

Remove the trim clip (1) by removing the trim clip screw (2); remove the front cover. Turn the headlight "ON".

Check the coolant level in the reserve tank (3) while the engine is at the normal operating temperature. If the coolant level is low (4), remove the reserve tank cap (5) and add coolant mixture until it reaches the UPPER level mark (6). Do not remove the radiator cap.

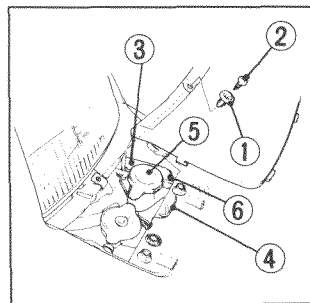

Inspección

Quitar la presilla (1) extrayendo para ello su tornillo (2) y luego quitar la tapa delantera. Encender el faro. Comprobar el nivel del refrigerante en el depósito de reserva (3) mientras el motor está a la temperatura de funcionamiento normal. Si el nivel del refrigerante estuviese bajo (4), quitar el tapón del depósito de reserva (5) y añadir mezcla de refrigerante hasta que el nivel alcance la marca superior (6). No quitar el tapón del radiador.