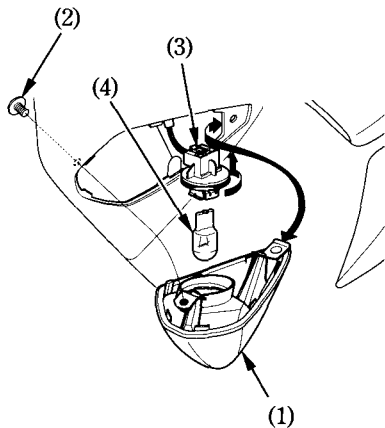**Front Turn Signal Bulb**

1. Remove the front turn signal rens (1) by removing the screw (2).
2. Turn the socket (3) 90° counterclockwise and remove it.
3. Pull out the bulb (4) without turning.
4. Install a new bulb in the reverse order of removal.

(1) Turn signal lens   (3) Socket
(2) Screw   (4) Bulb