


HEADLIGHT AIM VERTICAL ADJUSTMENT

Vertical adjustment can be made by turning the screws (low beam) (1) and screw (high beam) (2) with a Phillips screwdriver as necessary.

Obey local laws and regulations.

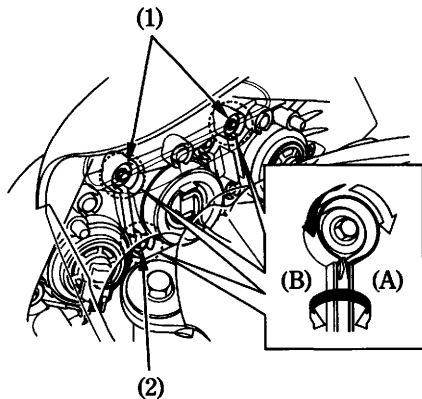

(1) Screws (low beam)

(2) Screw (high beam)

(A) Up

(B) Down